
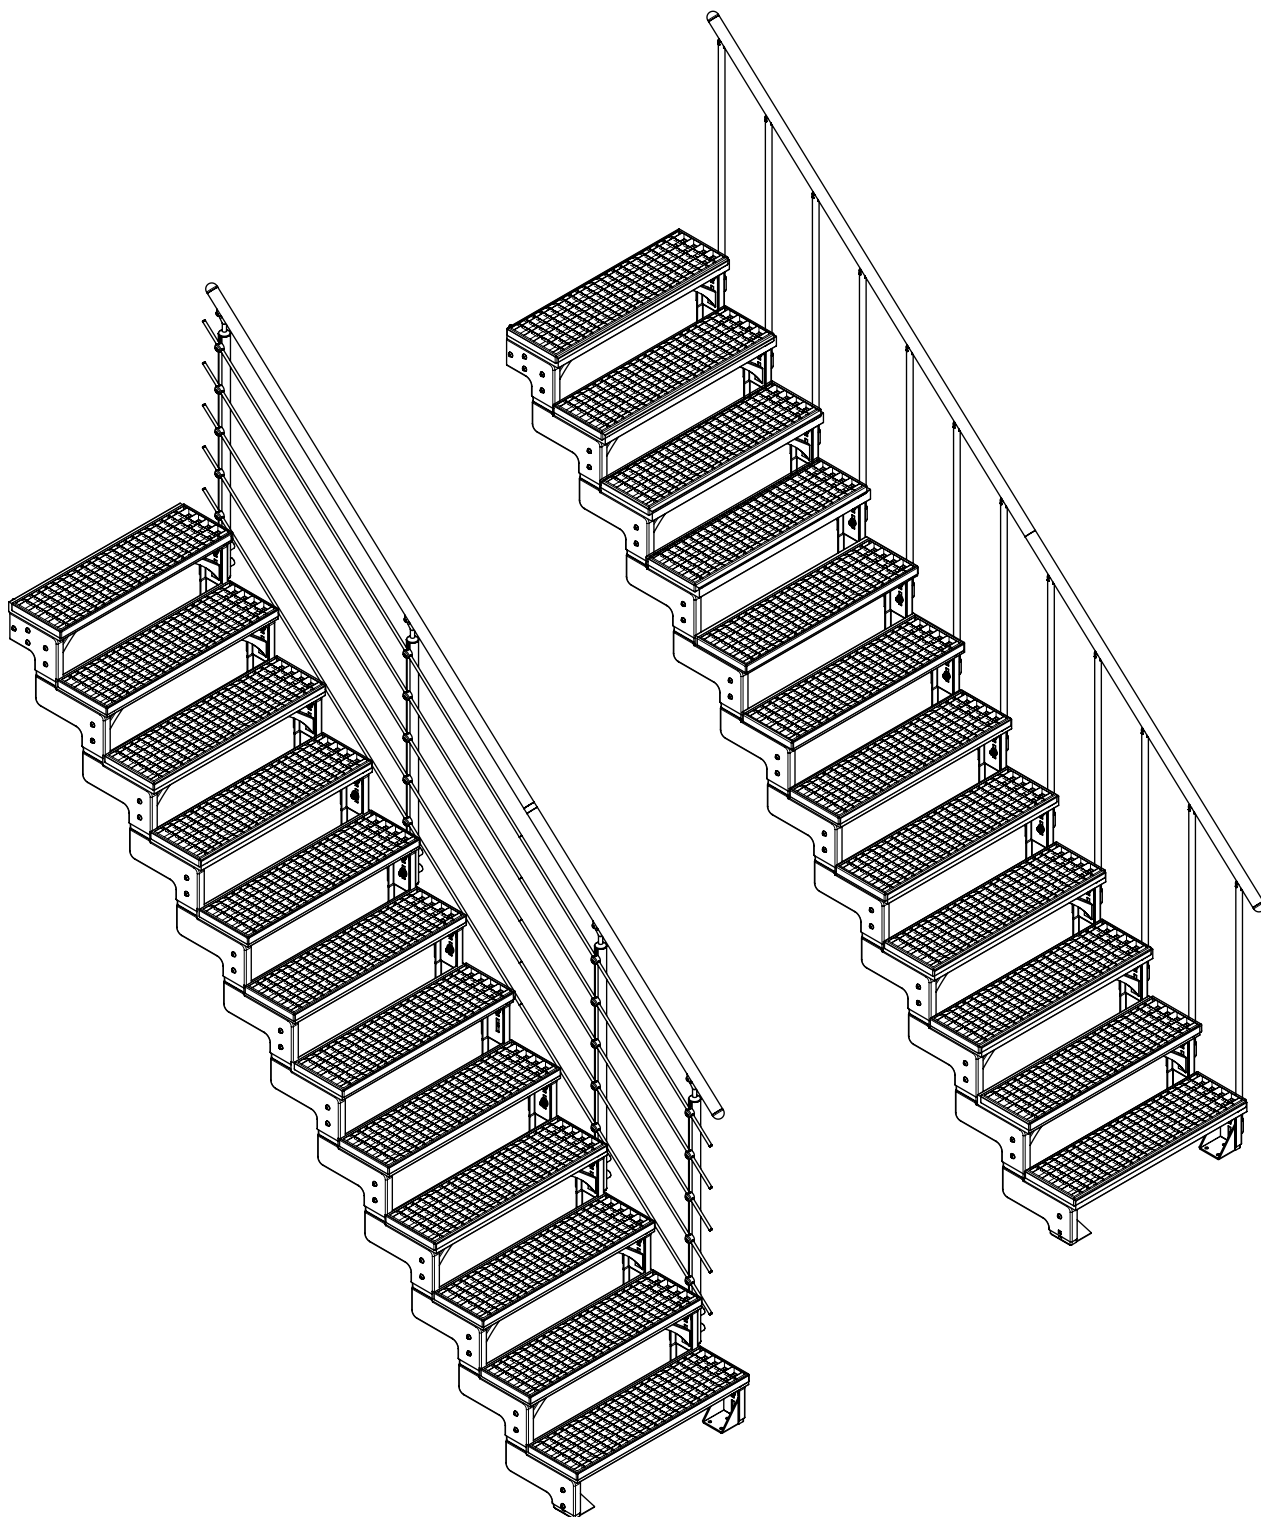
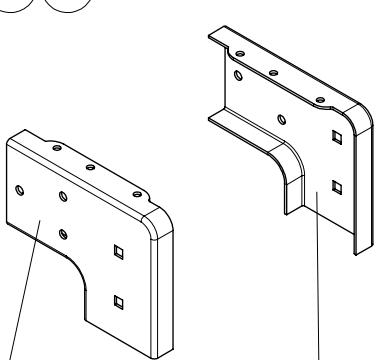
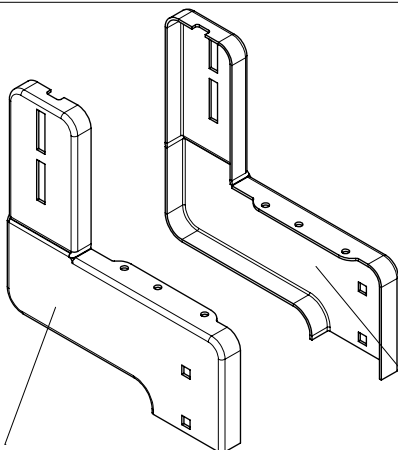
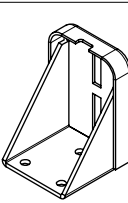
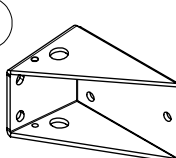






GARDENTOP


Gitterrost



Montageanleitung
Installation instruction












1068015			Starter-Set Start kit		
1 2  × 1 K1-41430 × 1 K1-41930			7 8  × 1 K1-41911 × 1 K1-41910		5  × 2 K2-41900
					6  × 2 K1-41940
40  × 14 K3-02045 M10×25	41  × 2 K3-04110 Ø10	42  × 8 K3-04198 Ø10	43  × 14 K3-03051 M10	44  × 12 K3-08001 Ø12 x 60	45  × 12 K3-06070 Ø10 x 60
59  × 12 K3-06269 Ø6 x 35	63  × 4 K3-05022 M8 x 20	64  × 12 K3-04010 Ø10,5			


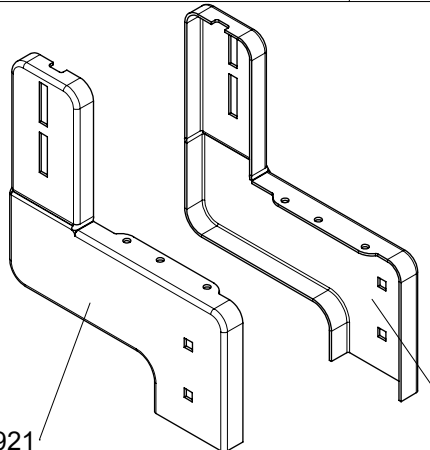

1068016			Ergänzungs-Set 1 step kit		
3 4  × 1 K1-41921 × 1 K1-41920			40  × 4 K3-02045 M10 x 25	42  × 4 K3-04198 Ø10	43  × 4 K3-03051 M10
			59  × 6 K3-06269 Ø6 x 35		

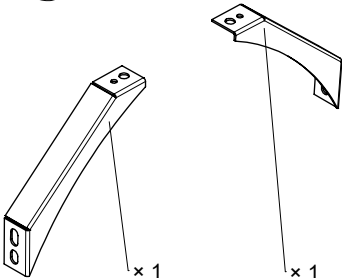1068020		Stufen-Winkel Step support 1 step			
 If more than 6 steps: Add 9 + 10 Wenn mehr als 6 Stufen: hinzufügen 9 + 10	9 10  x 1 K1-41060 x 1 K1-41061 Max. 6 Satz sets	40  x 2 K3-02045 M10 x 25 	43  x 2 K3-03051 M10 	58  x 2 K3-02386 M8 x 40 	
	59  x 1 K3-06269 Ø6 x 35 	61  x 2 K3-03047 M8 	65  x 2 K3-04099 Ø10 		

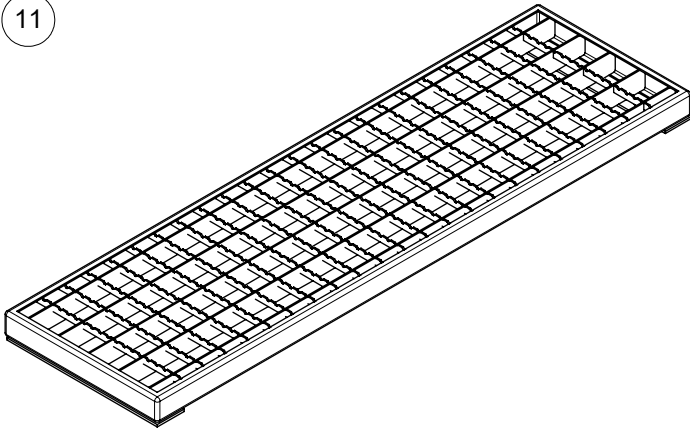
		Gitterrost-Stufe Grating step			80 cm / 100 cm		
11		44		55	 	56	 
		× 2		× 4 K3-04016 Ø6		× 4 K3-03046 M6	
		57	 	58	 	61	 
		× 4 K3-02220 M6 x 20		× 2 K3-02386 M8 x 40		× 2 K3-03047 M8	

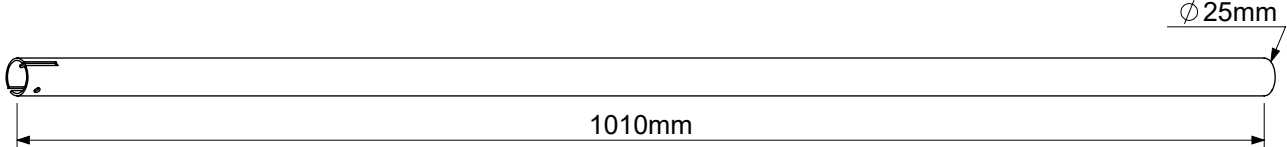1068031		Steiggeländer für 6 Stufen Standard banister for 6 steps		
14  × 6 K2-41052	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040	
18  × 6 K1-41056				
19  × 1 K1-01100				
46  × 6 K3-01034 M4 x 30	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6 x 8	68  × 16 K3-05052 M5 x 16	

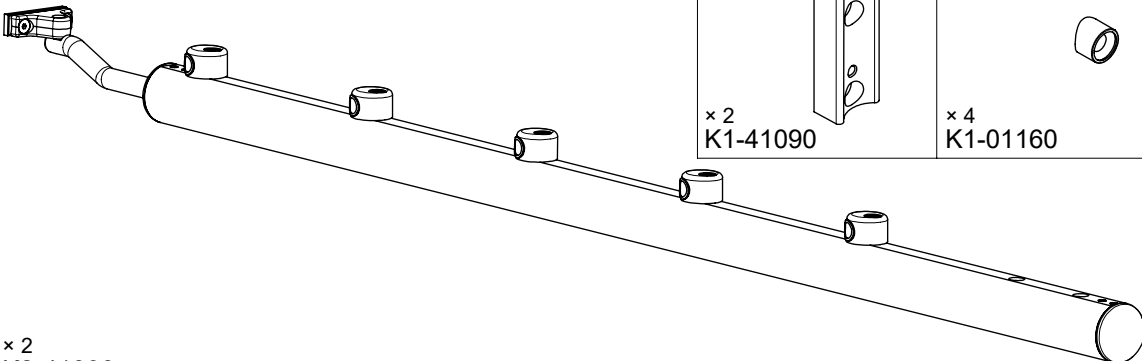
1068040		Steiggeländer PROVA Starter-Set für 4 Stufen PROVA banister start for 4 steps		
17  × 2 K2-04040	20  × 2 K2-41090		21  × 2 K1-41090	22  × 4 K1-01160
26  × 1 K1-01107	1240mm 			
27  × 5 K1-18060	1240mm 			
28  × 10 K1-01010	29  × 1 K2-14930	51  × 4 K3-02010 M10 x 70		

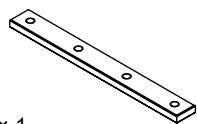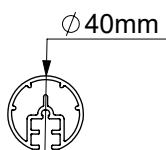1068041**Steiggeländer PROVA Ergänzungs-Set für 4 Stufen**
PROVA banister extension for 4 steps**15**× 1
K1-01221**20**× 1
K2-41090**21**× 1
K1-41090**22**× 2
K1-01160**26**× 1
K1-01107

1240mm



27× 5
K1-18060


1240mm

29× 1
K2-14930**51**× 2
K3-02010
M10×70**53**× 5
K3-05050
M5 x 12**54**× 5
K3-08023
Ø8


1068098		Unterstützung Support		OPTION	
24 	26  × 1 K1-41955	27  × 1 K1-41956	41  × 1 K3-04110 Ø10	43  × 1 K3-03051 M10	52  × 1 K3-02375 M10 x 75
	53  × 2 K3-05007 M5 x 5	54  × 1 K3-08002 Ø8 x 40	55  × 1 K3-06032 Ø6 x 60		

× 1
K1-41950


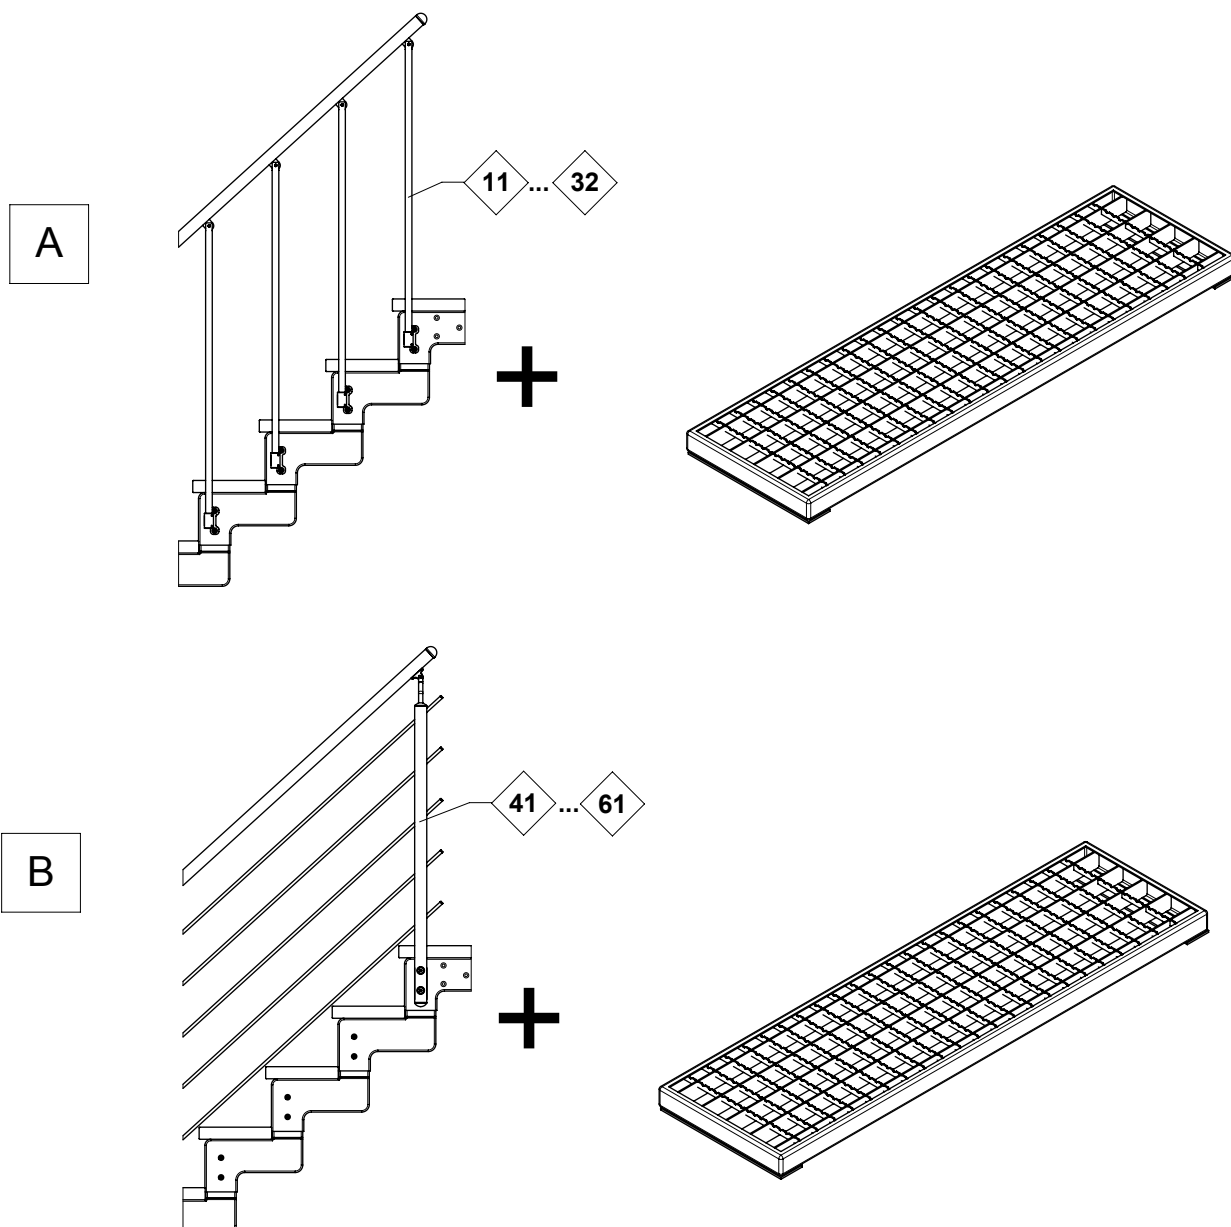
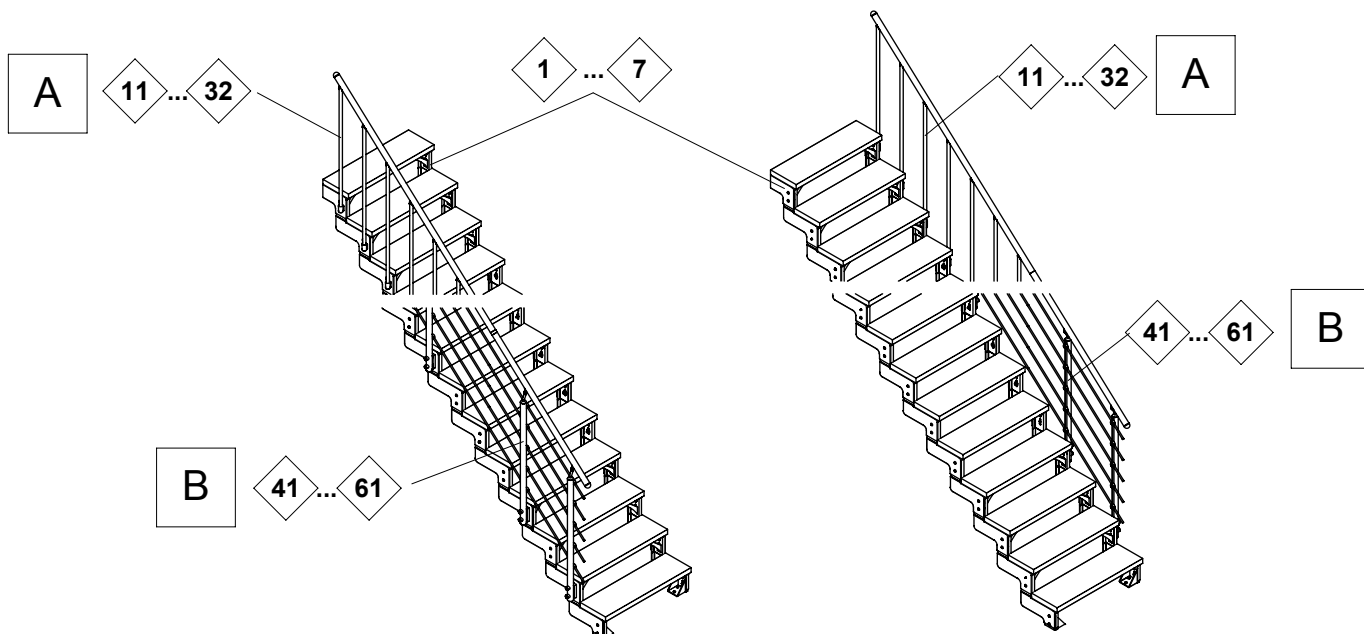




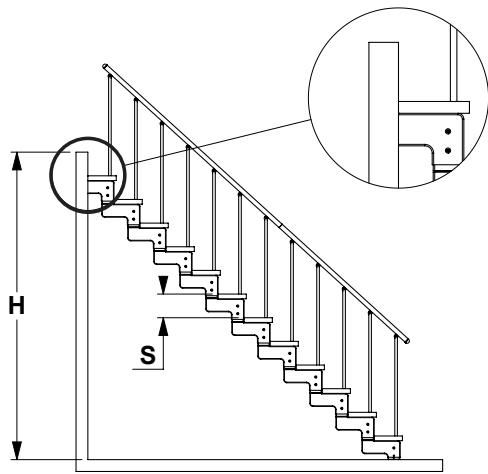




H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860



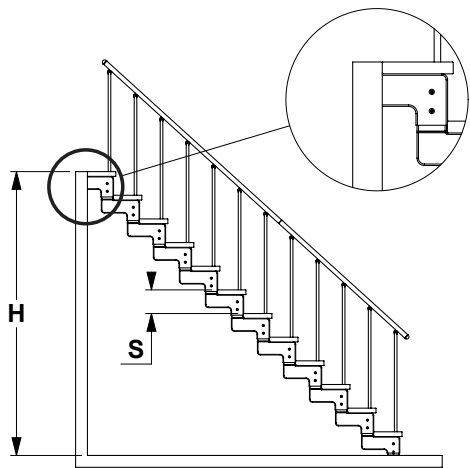





H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

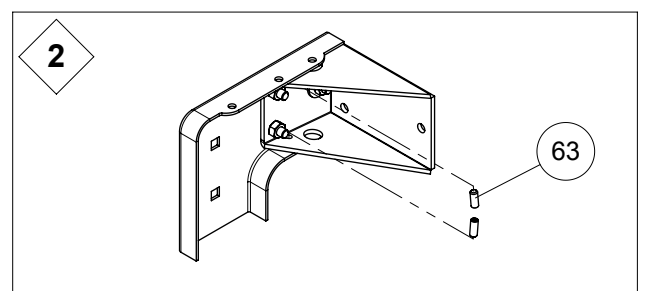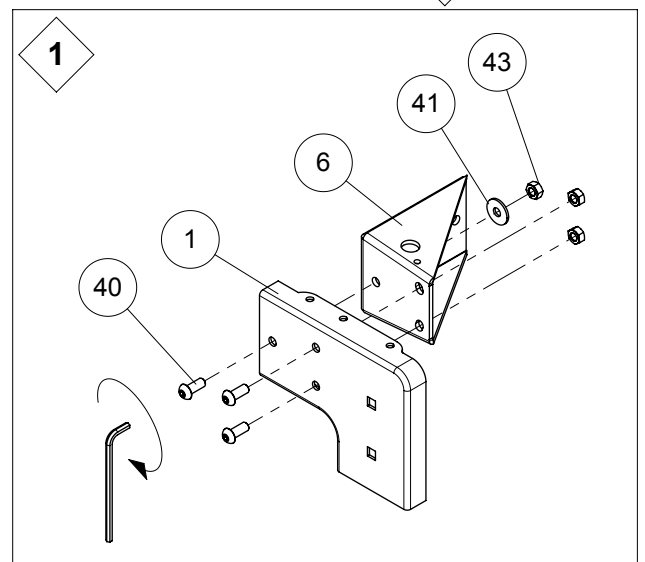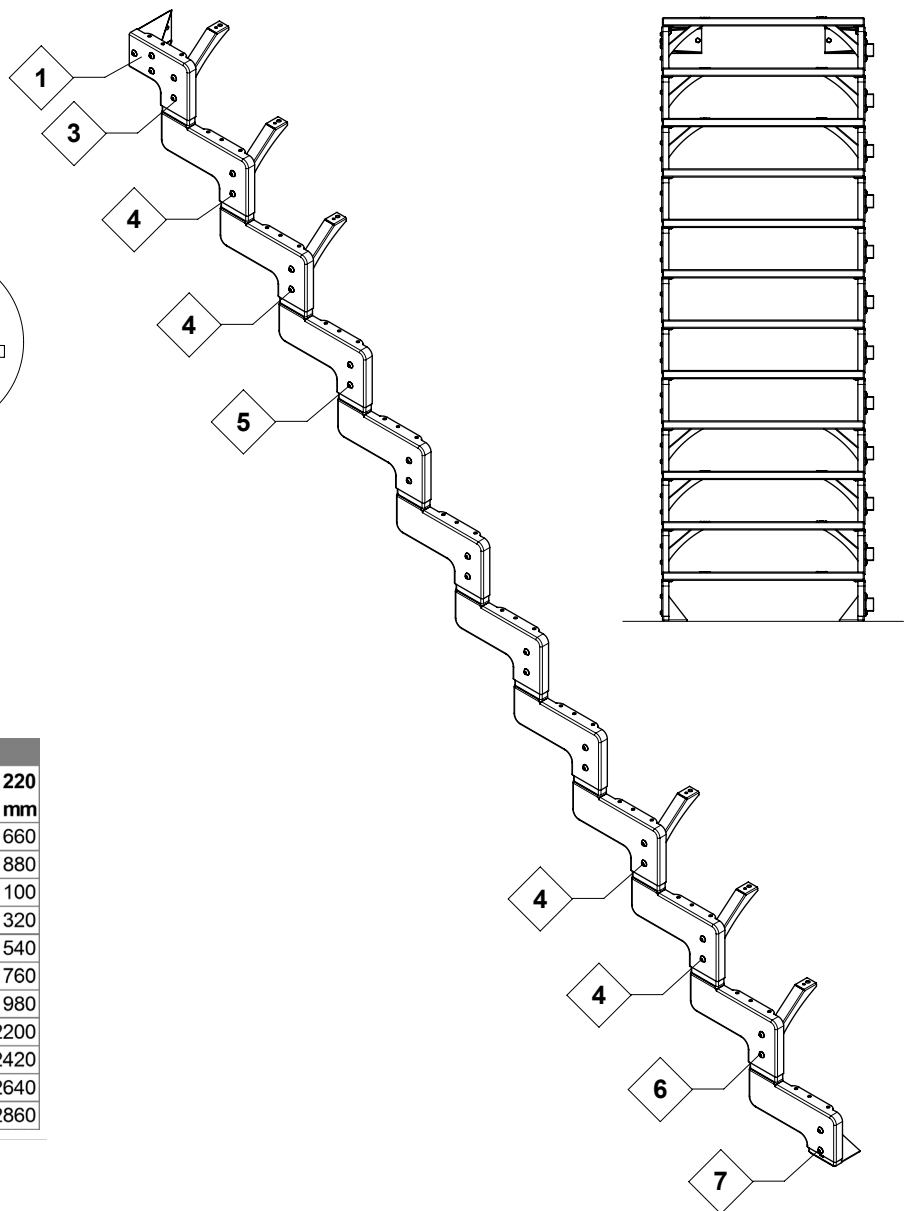

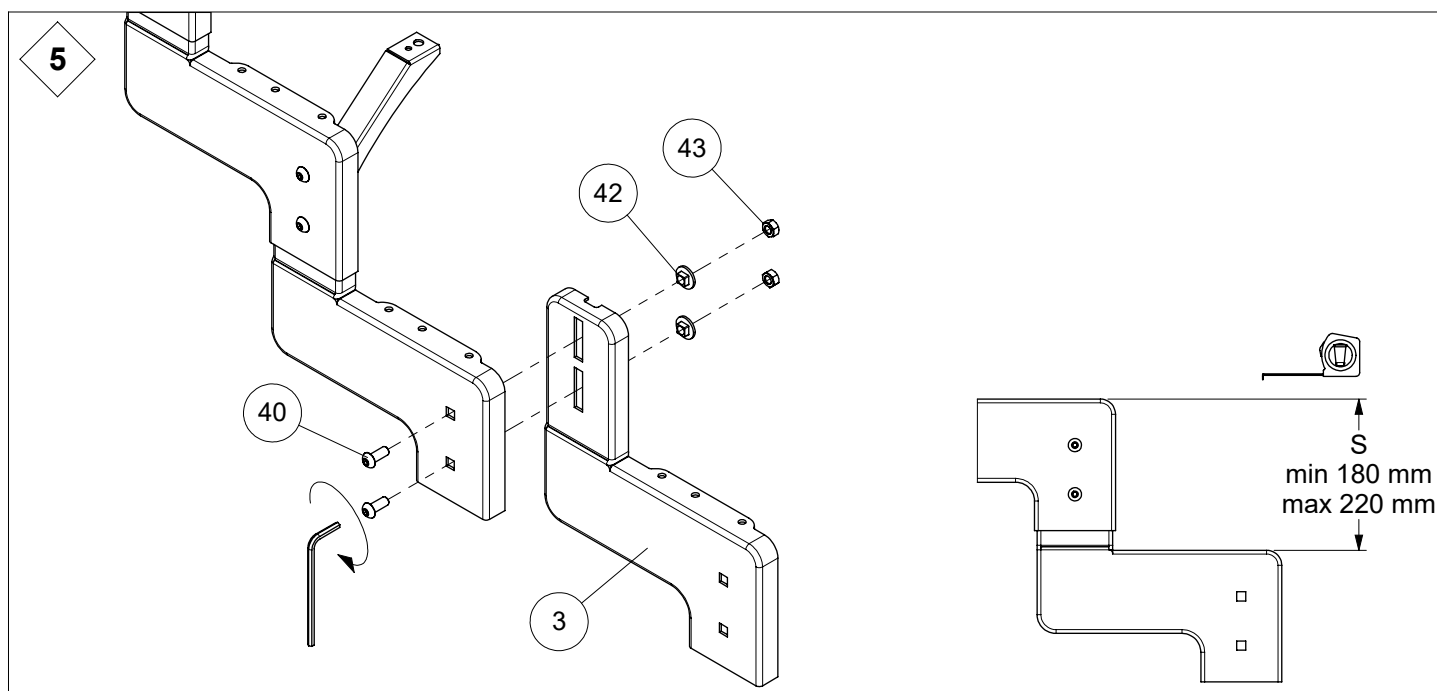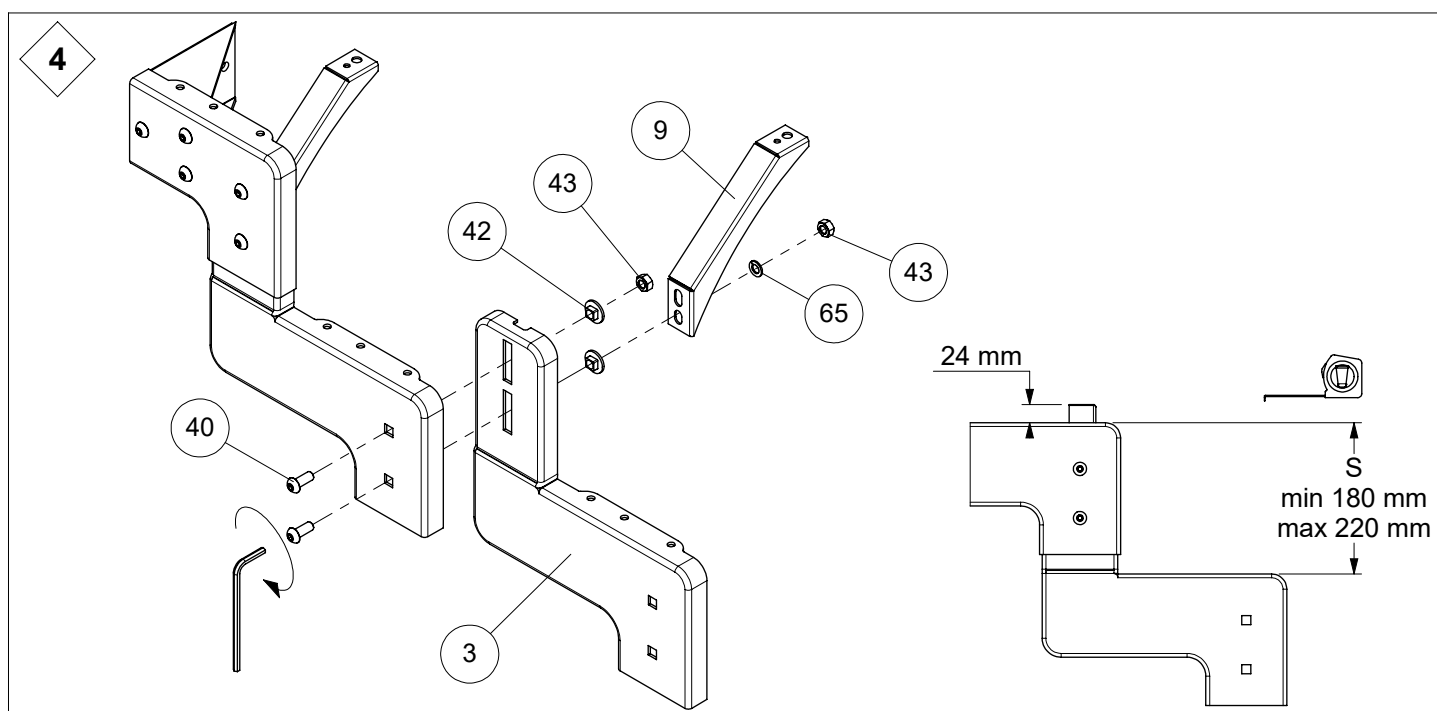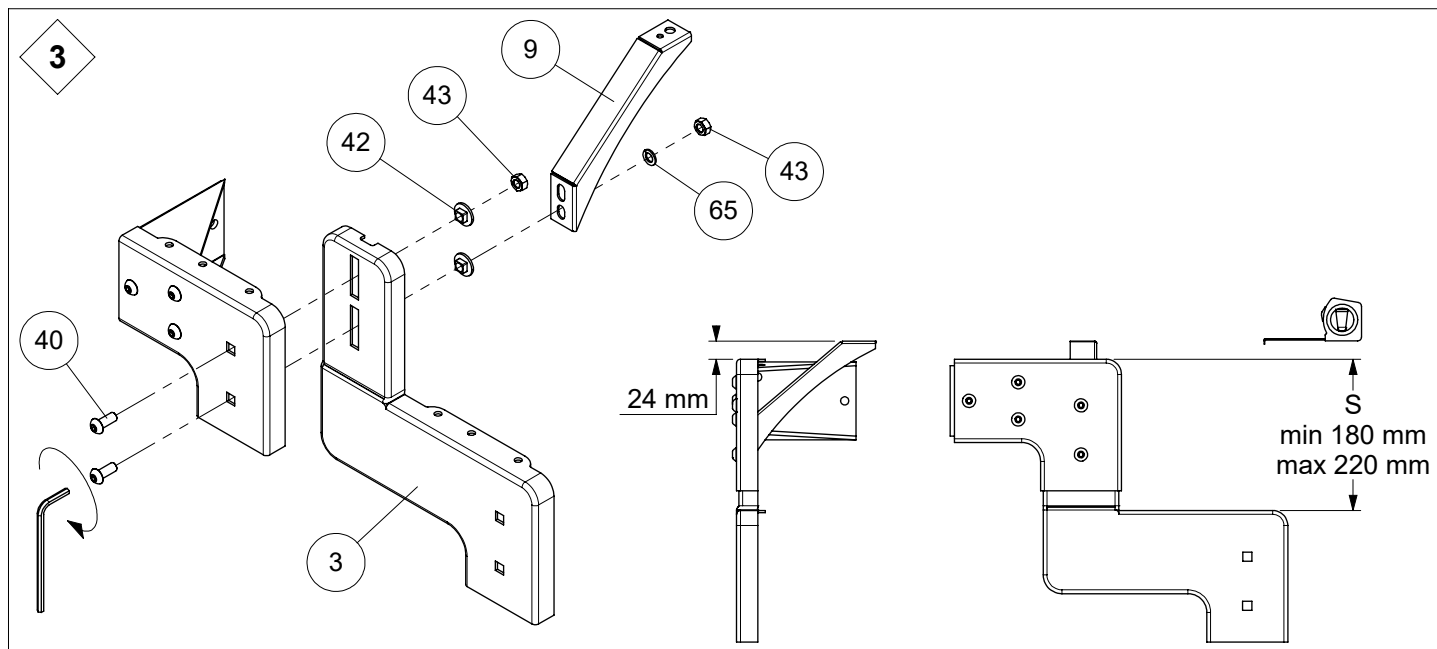

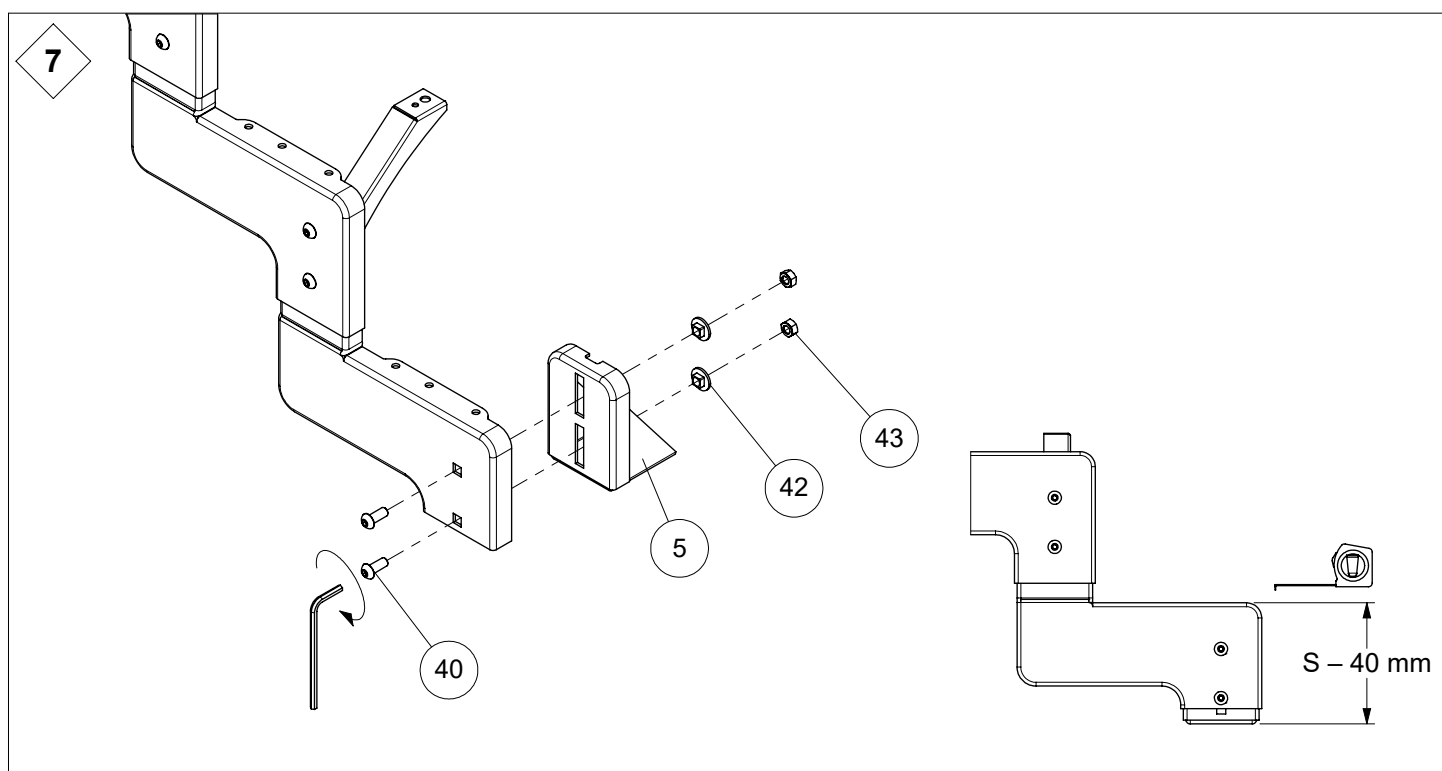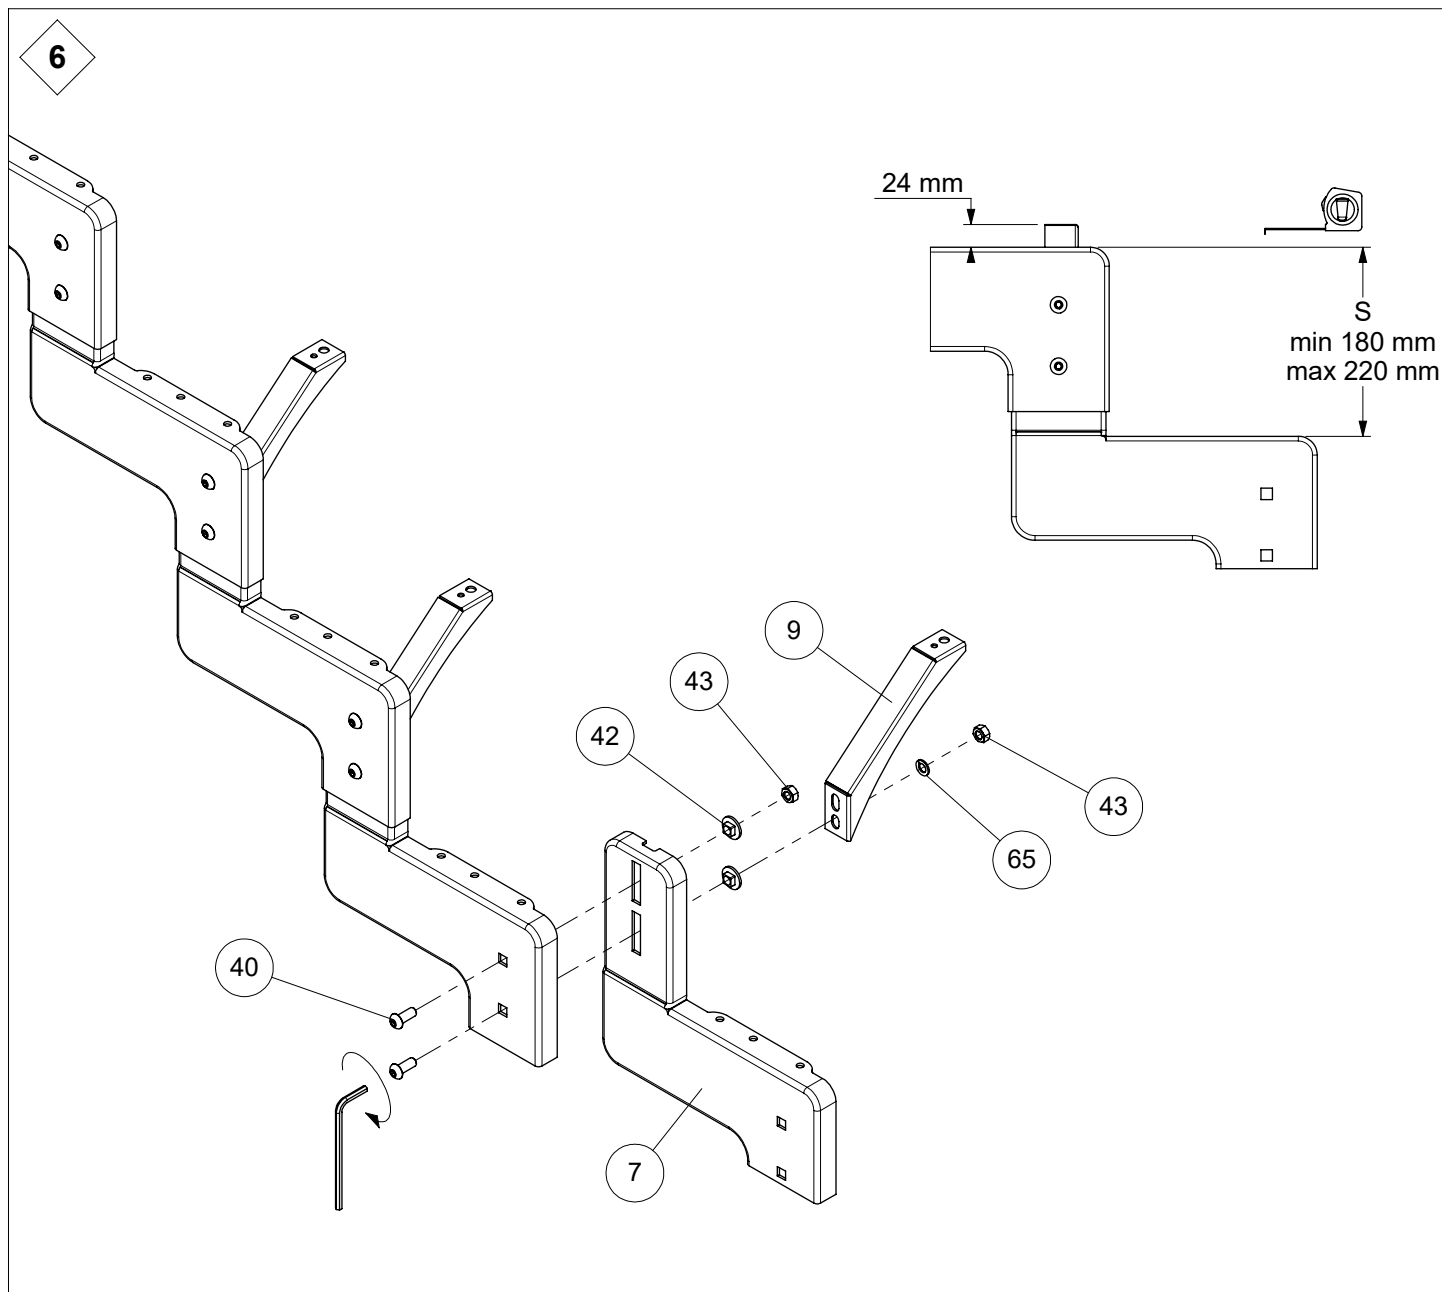


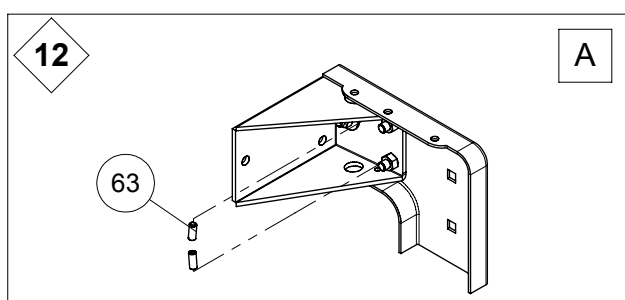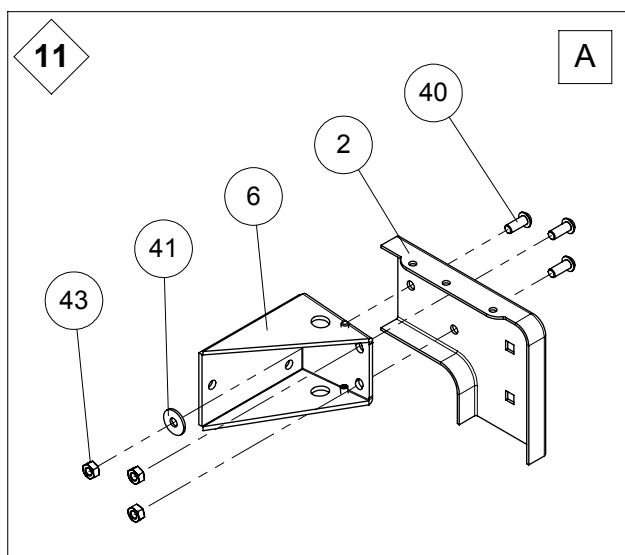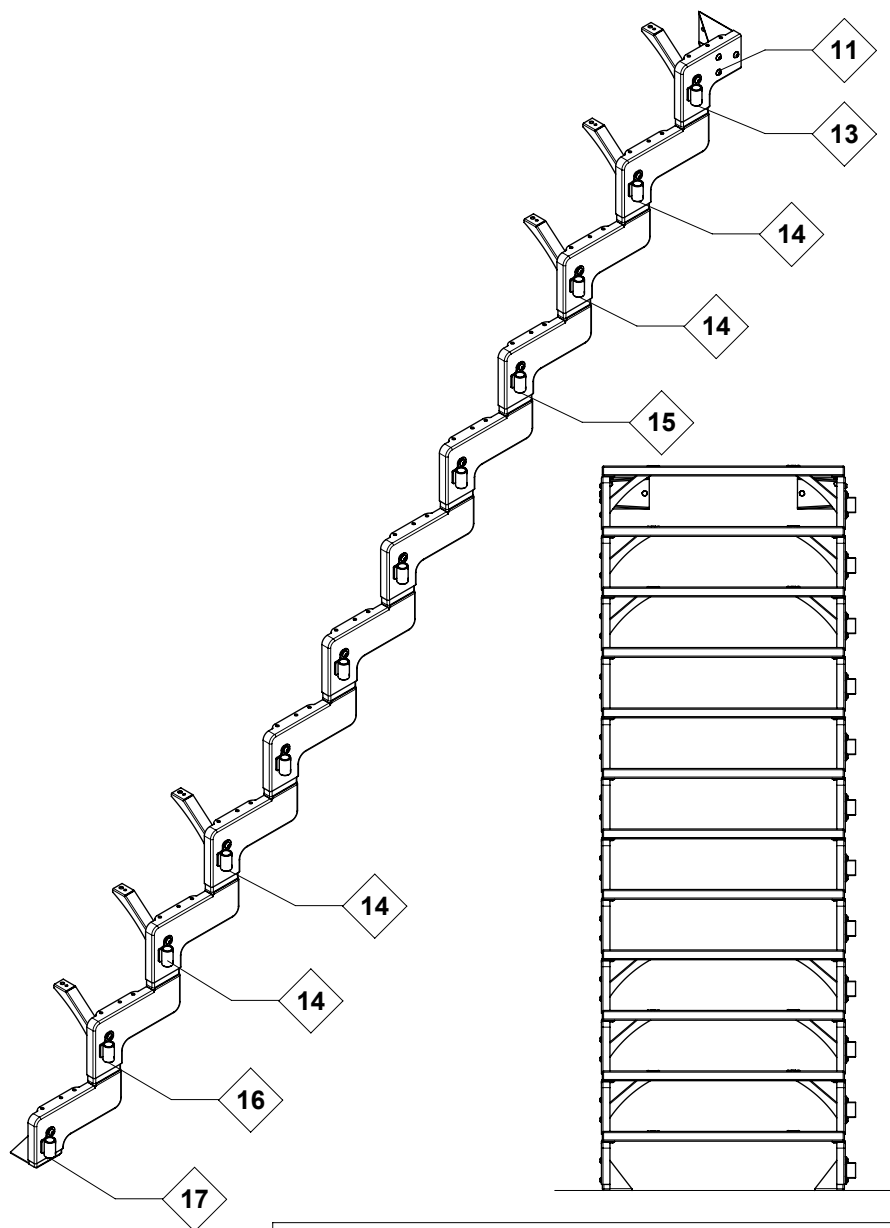

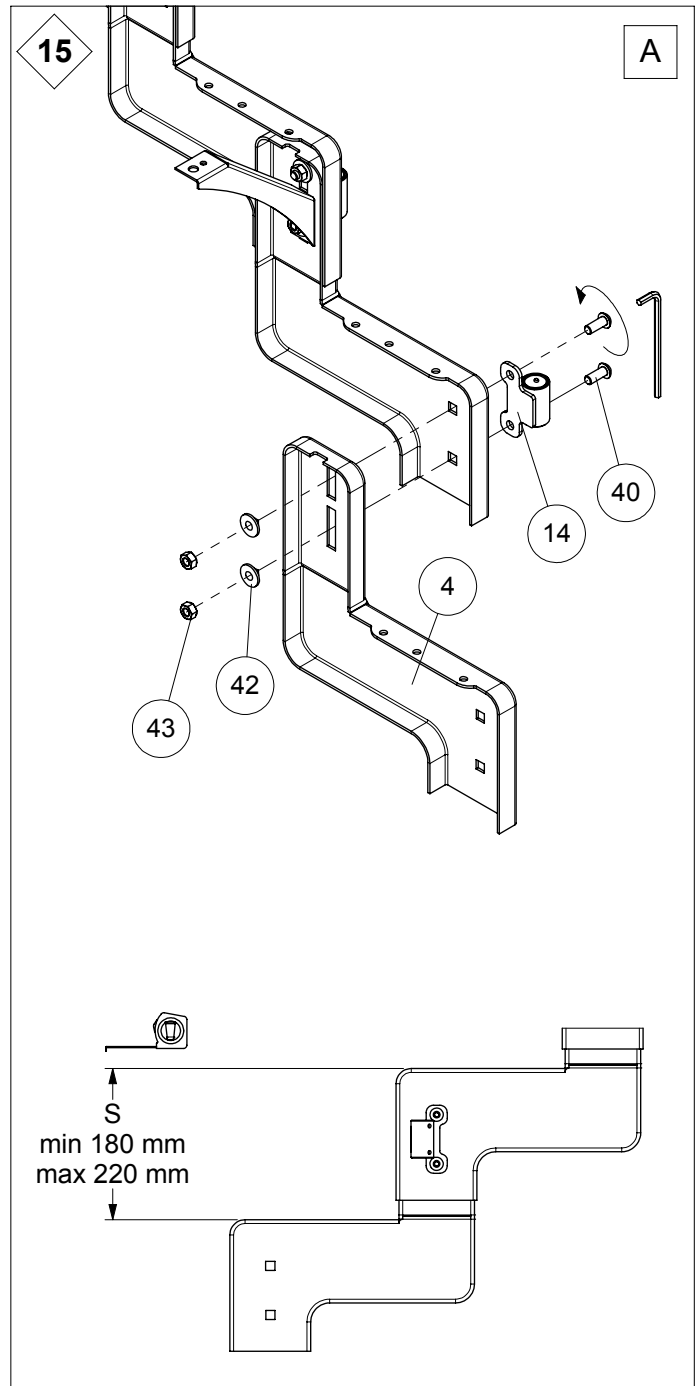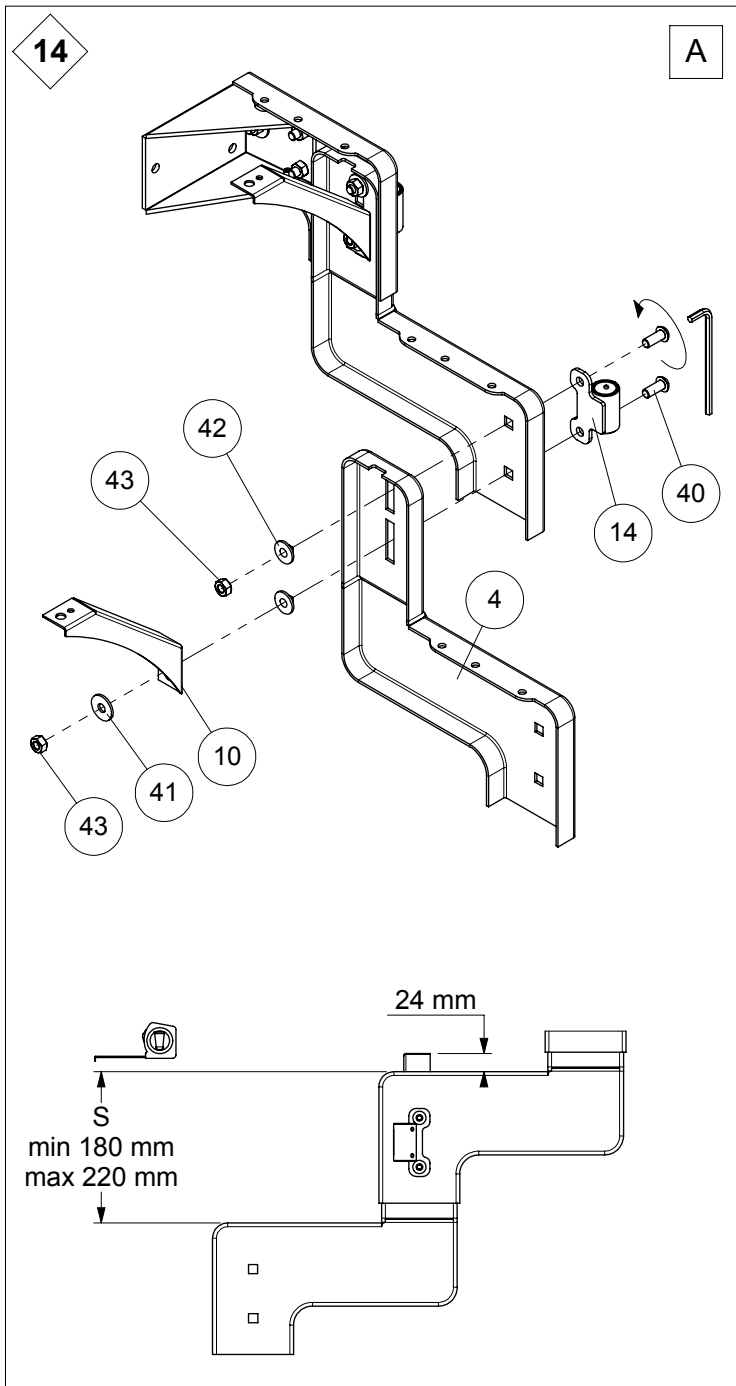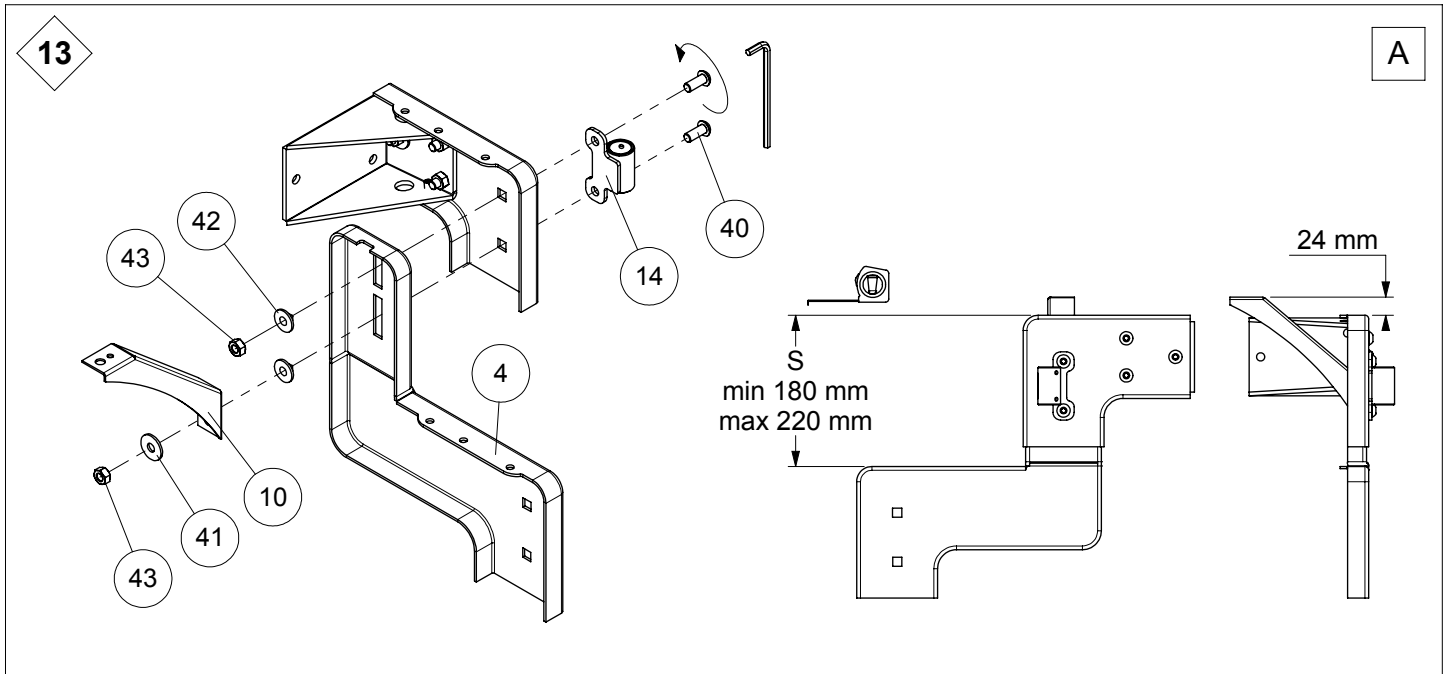


16



A

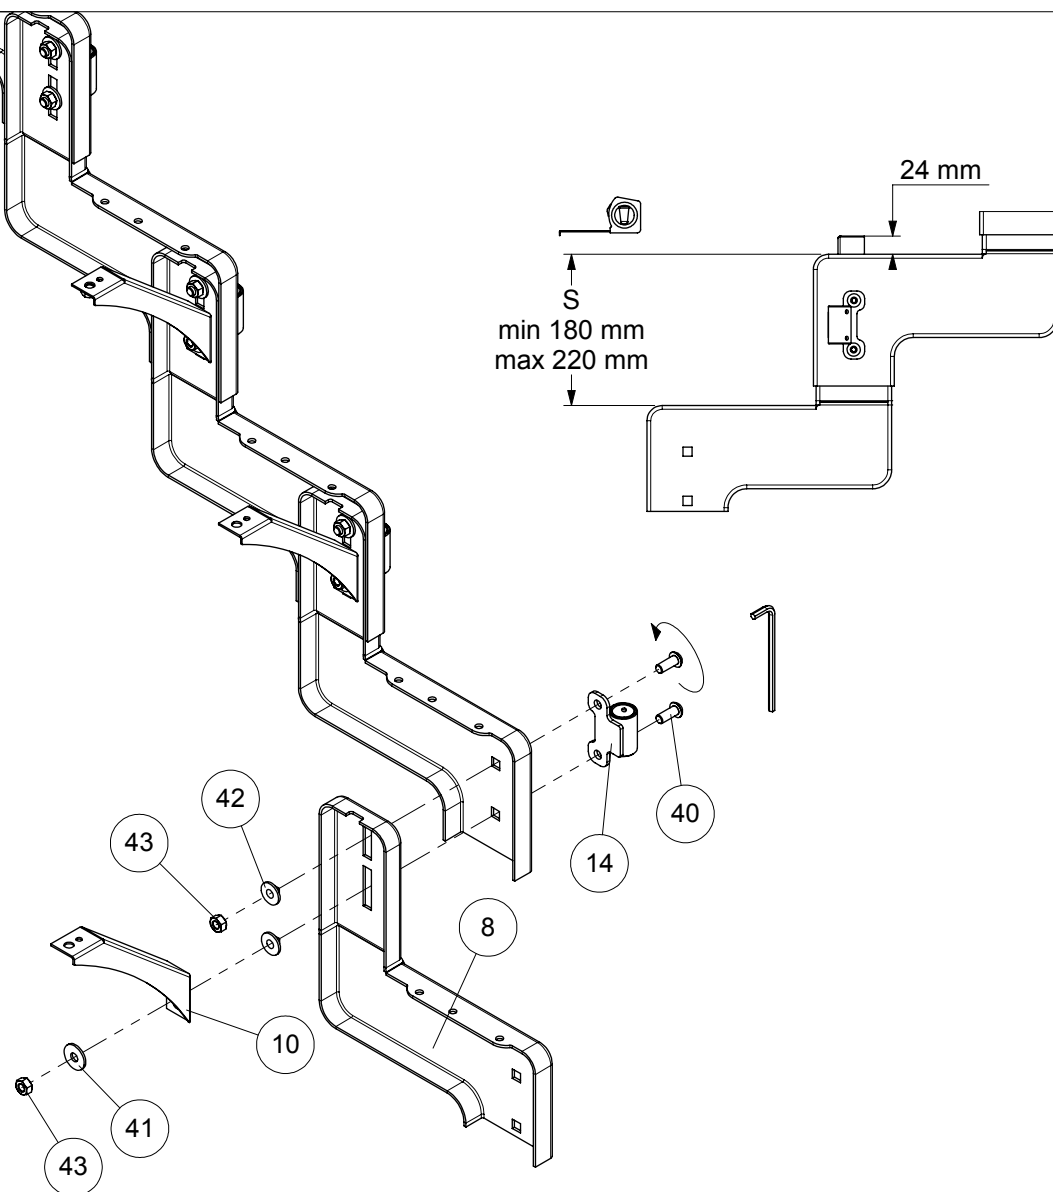

17




A

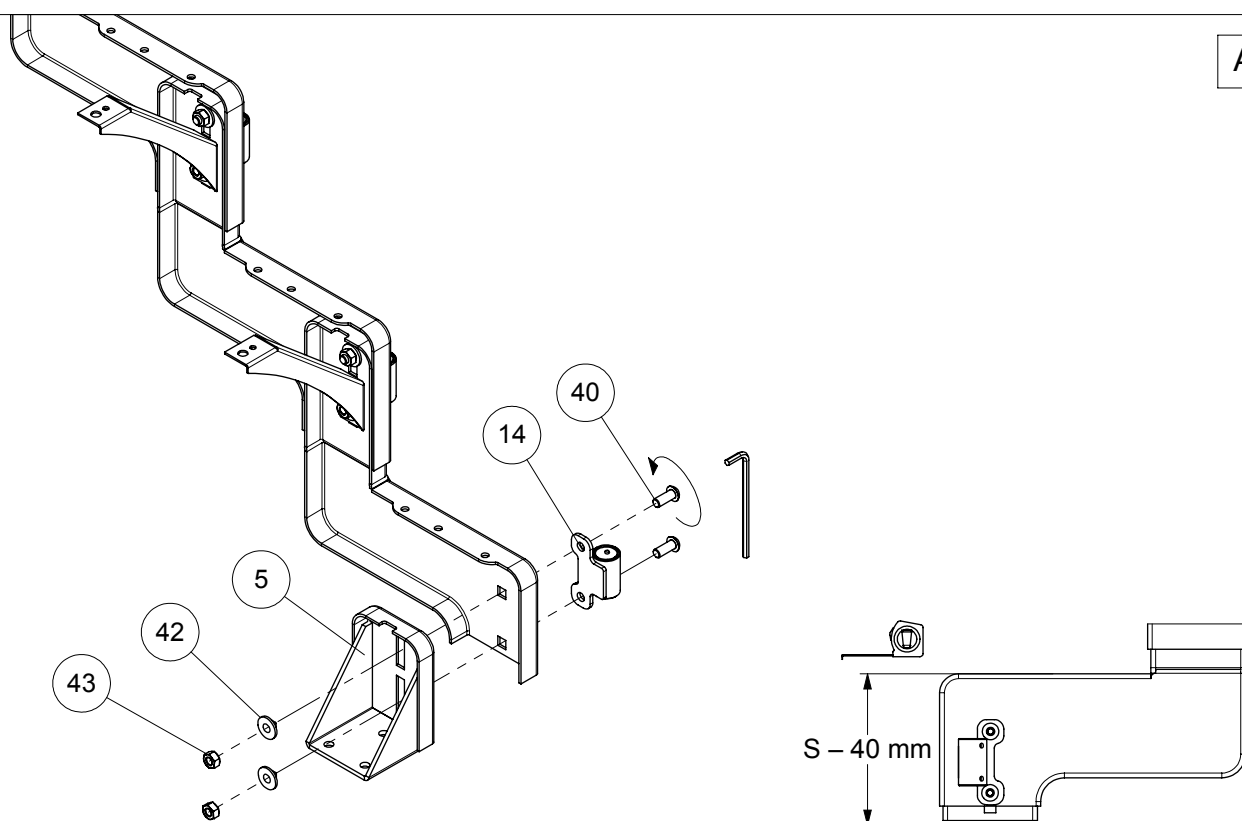

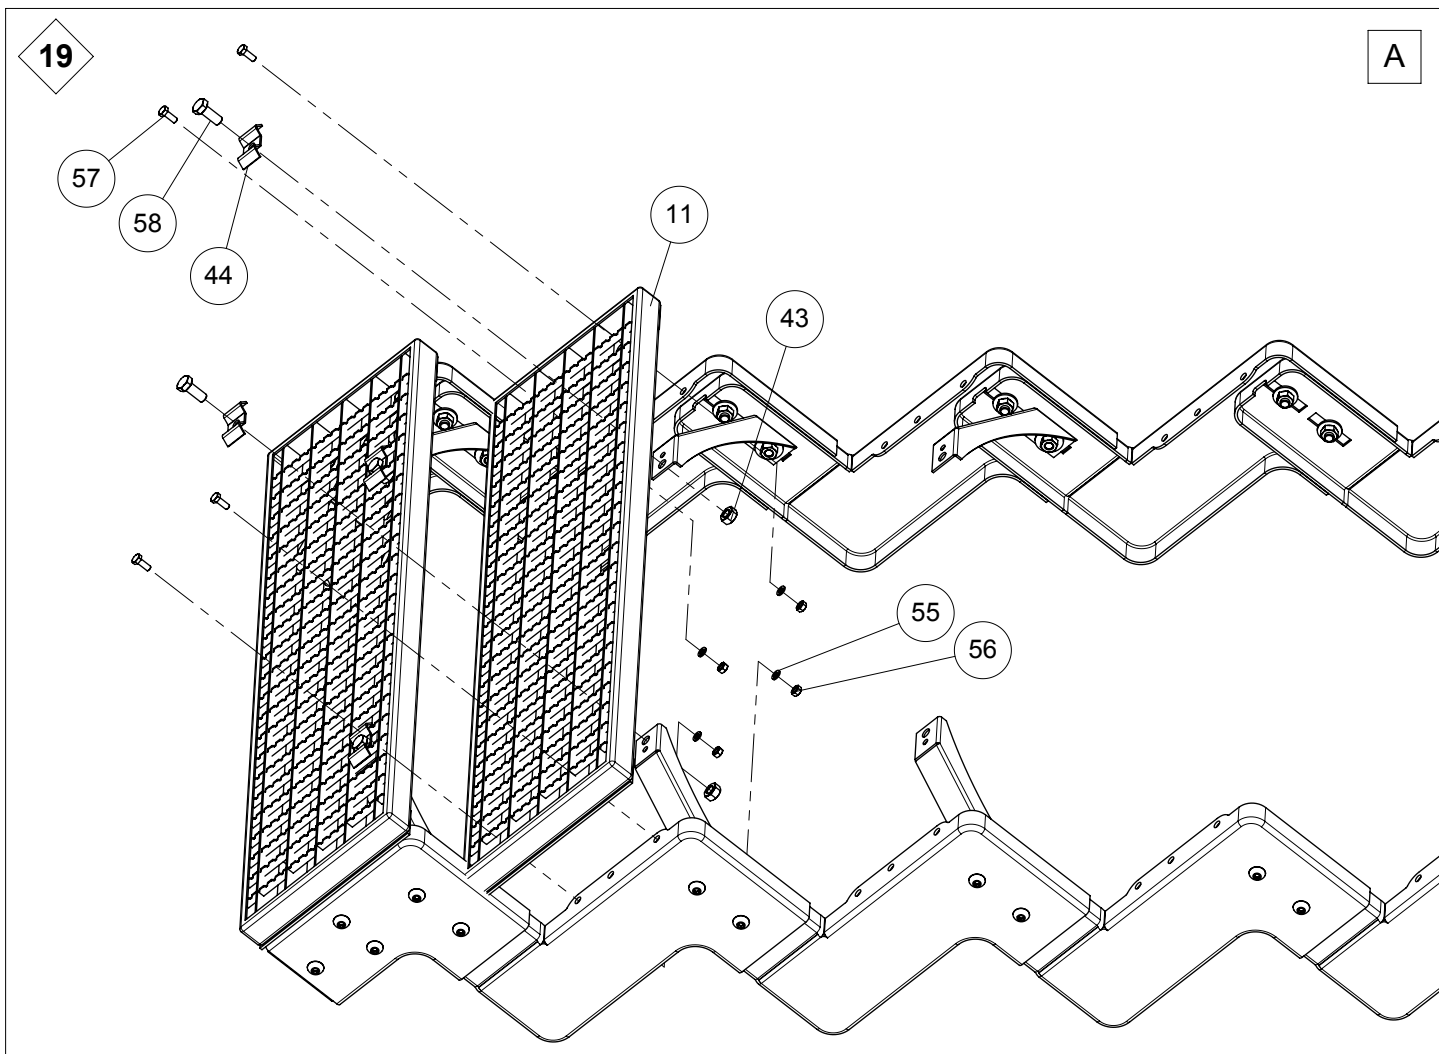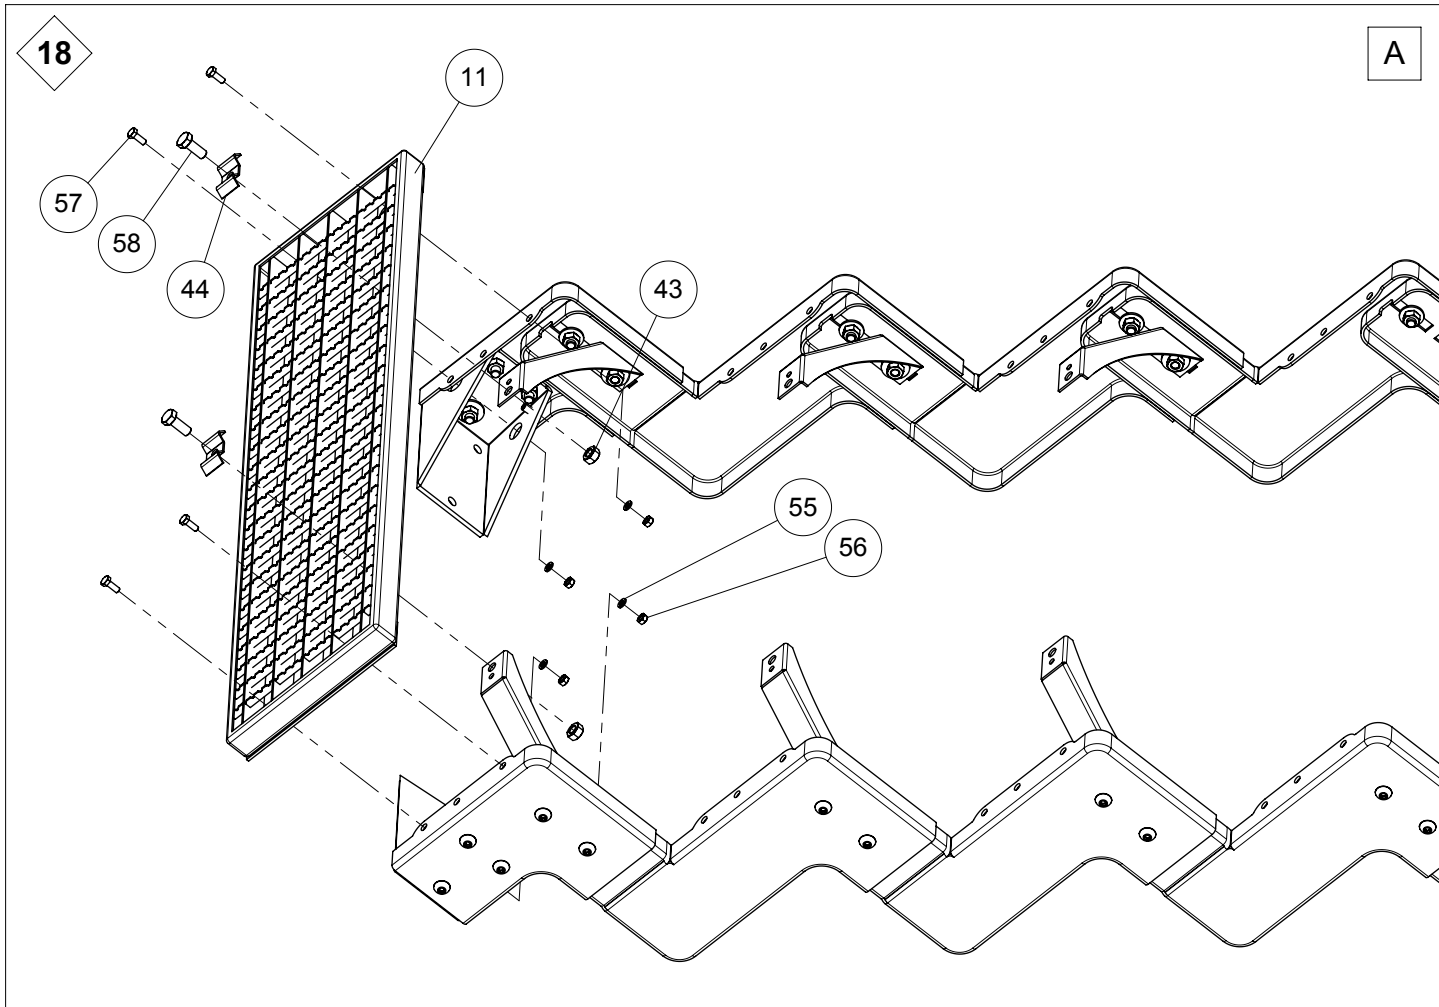

20


A

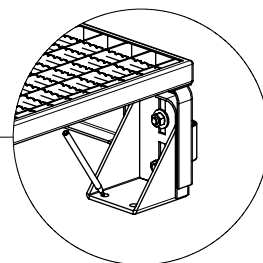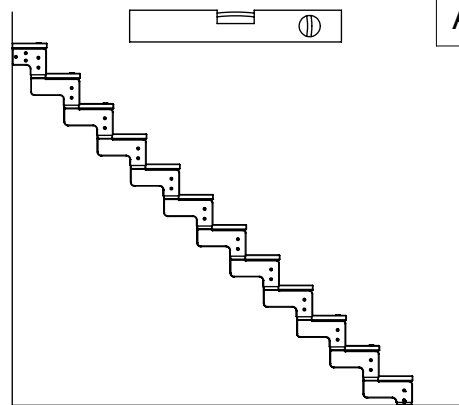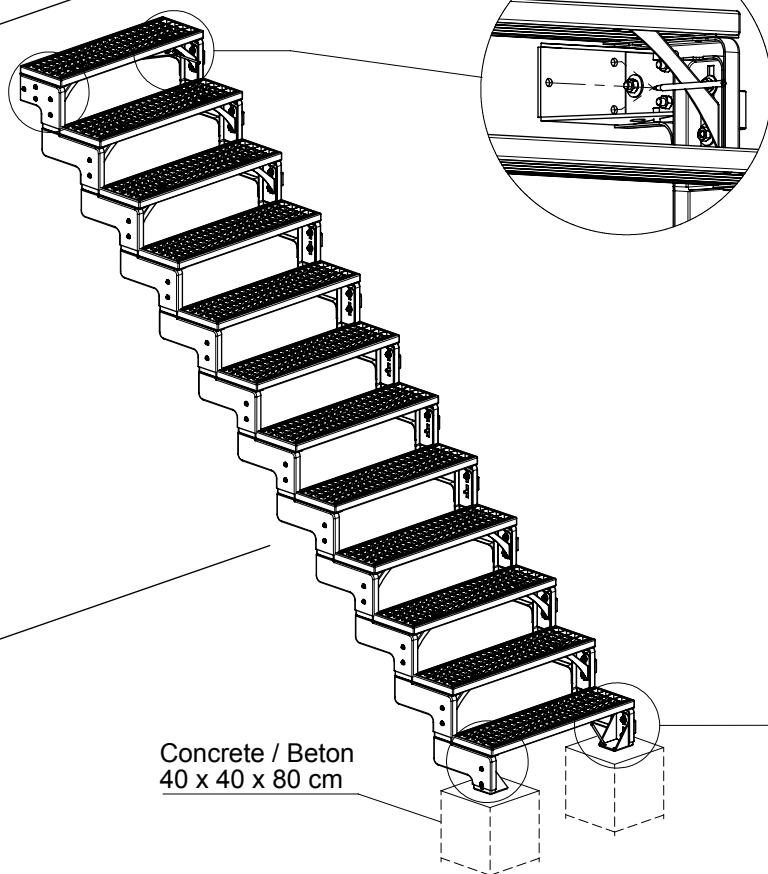

21

22

A




21

 $\varnothing 12\text{mm} \nabla 70\text{mm}$

44

45

22


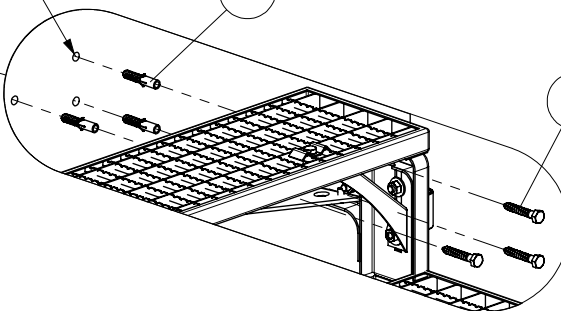





22





45




44




21

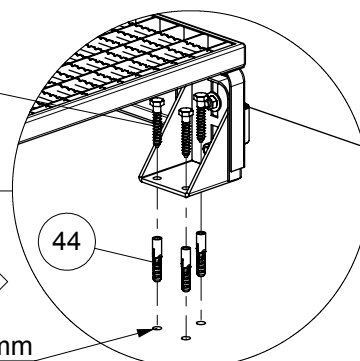
 $\varnothing 12\text{mm} \nabla 70\text{mm}$

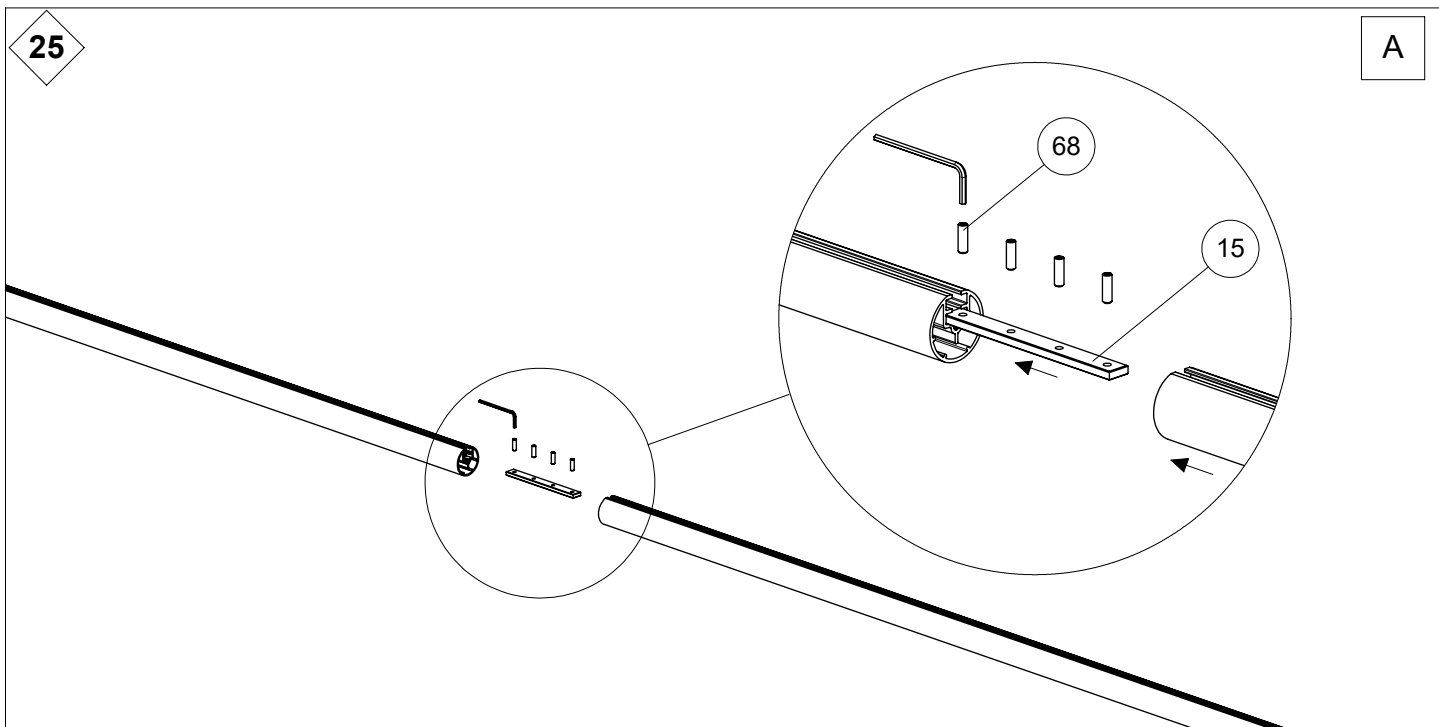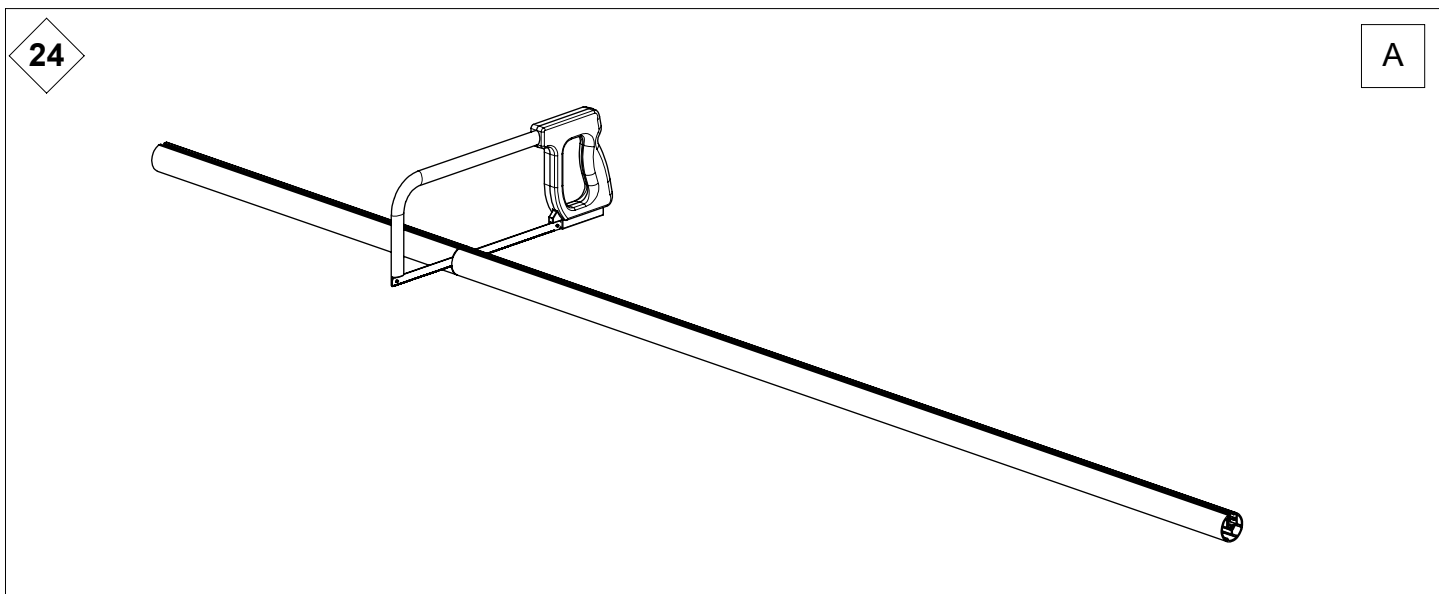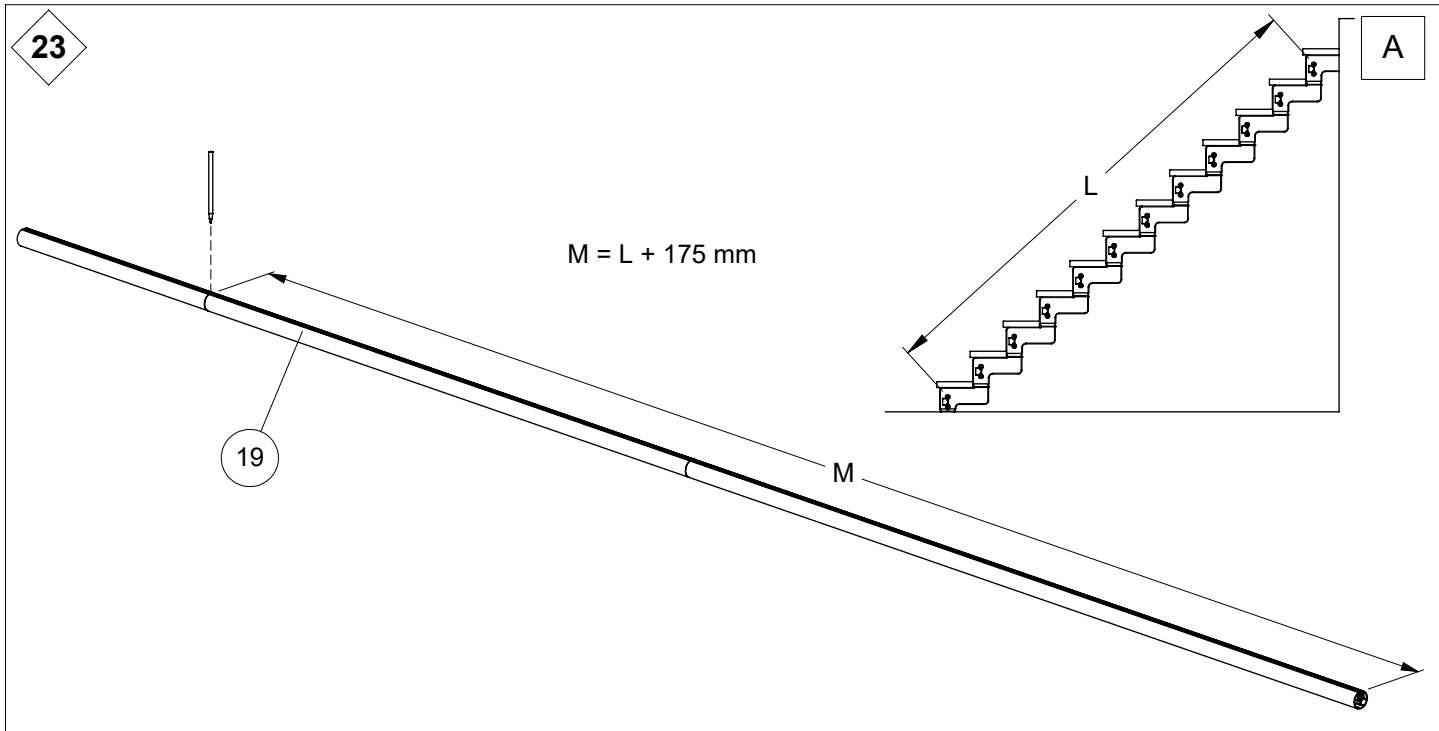

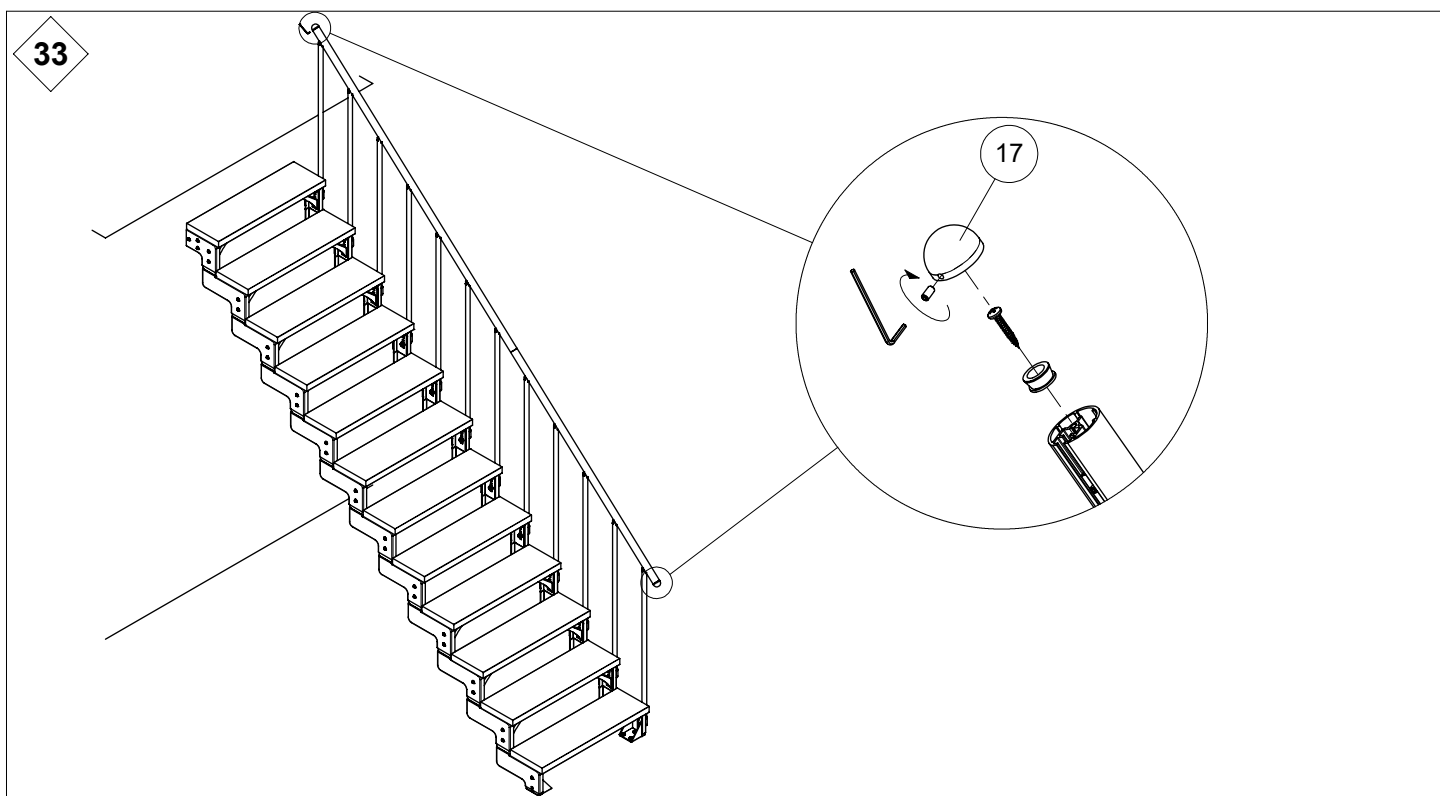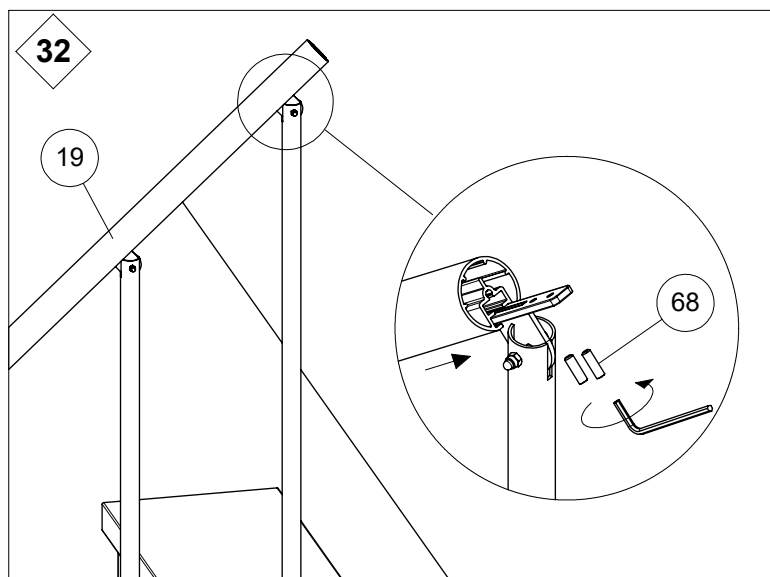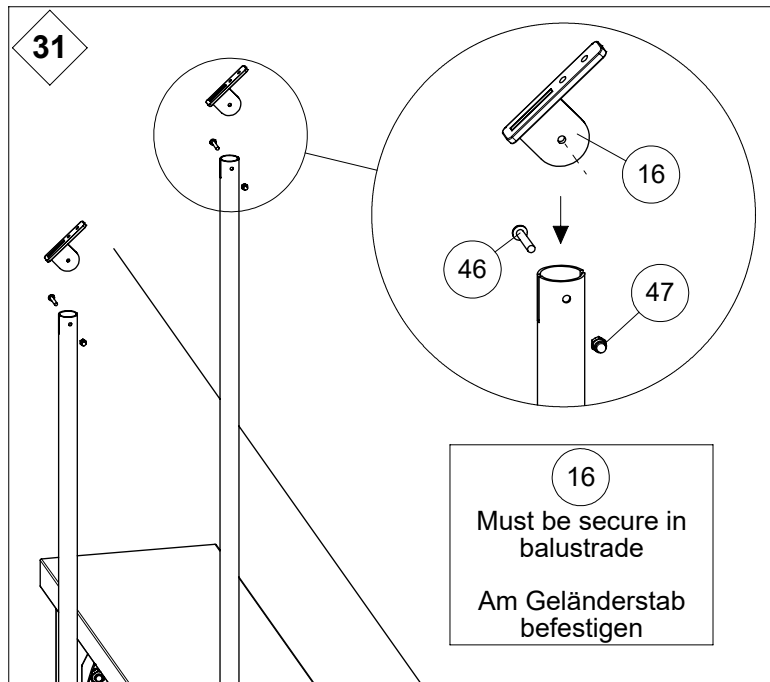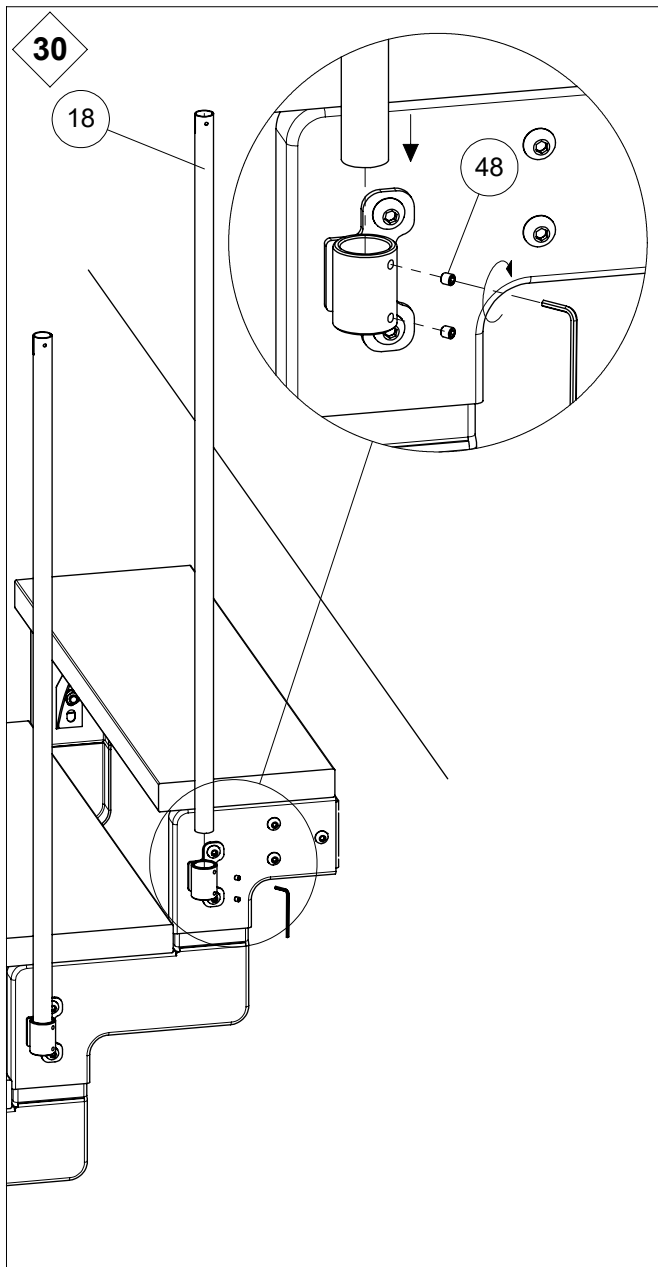
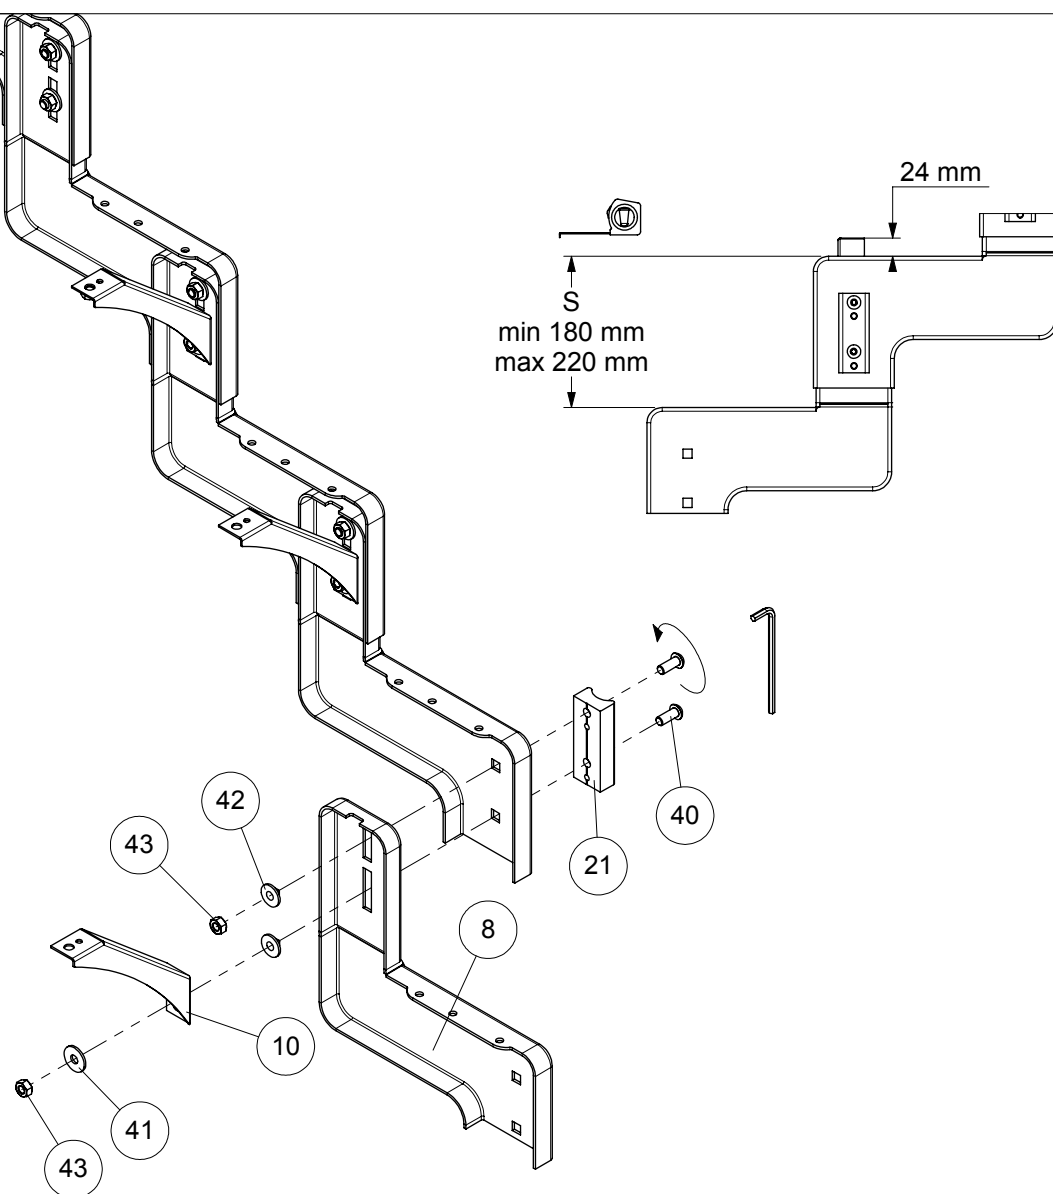


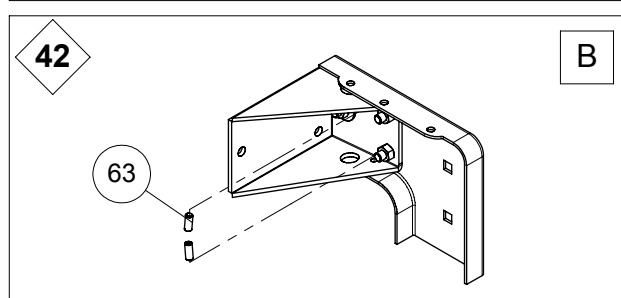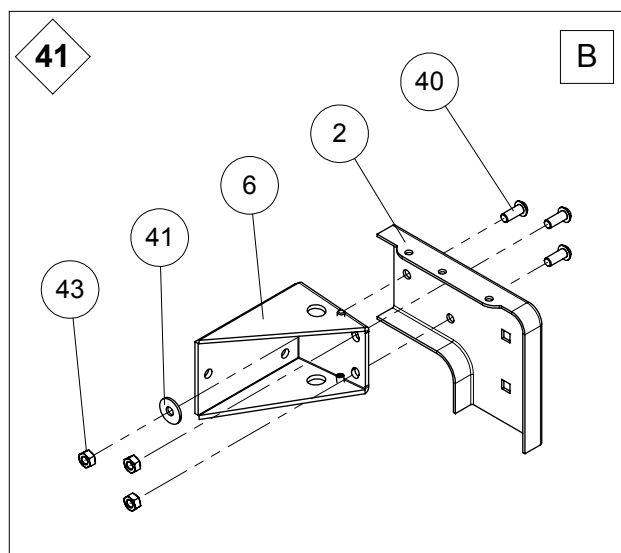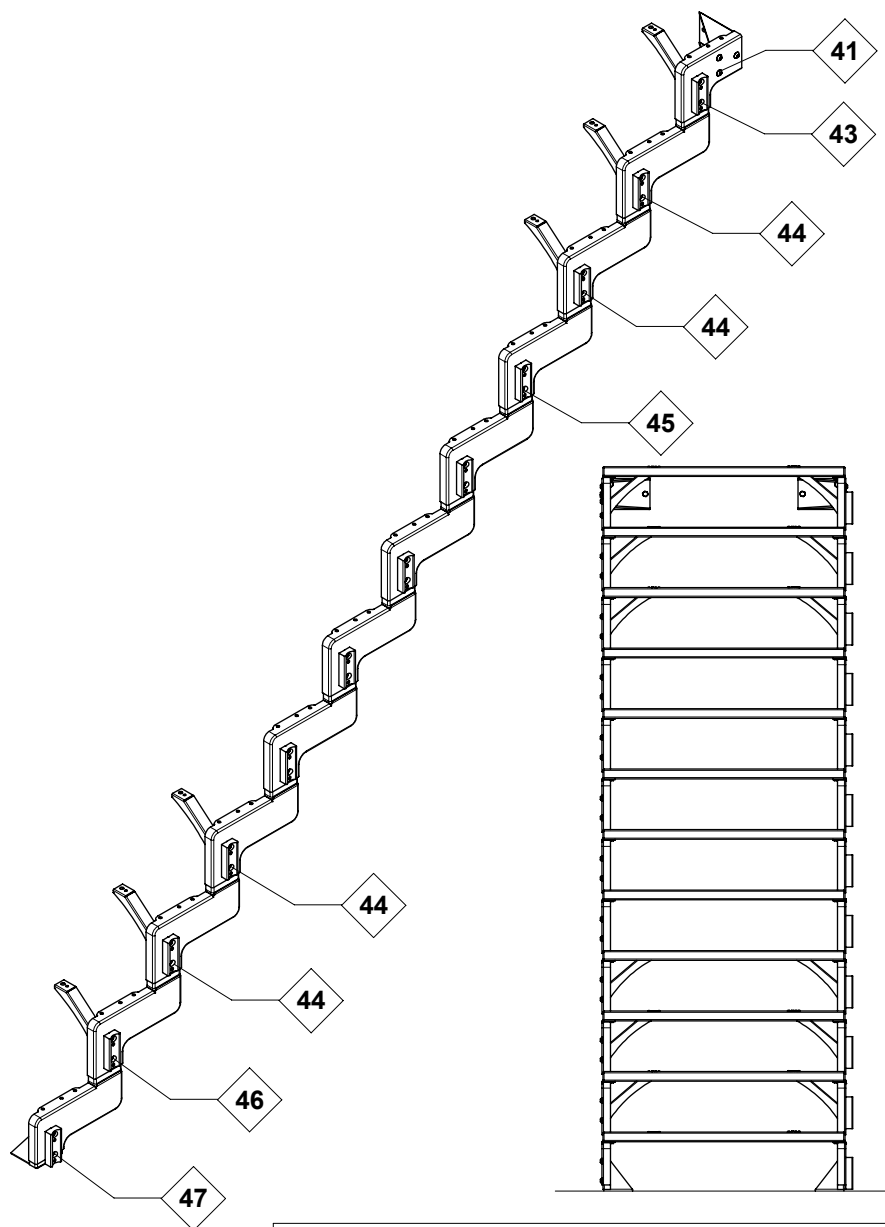

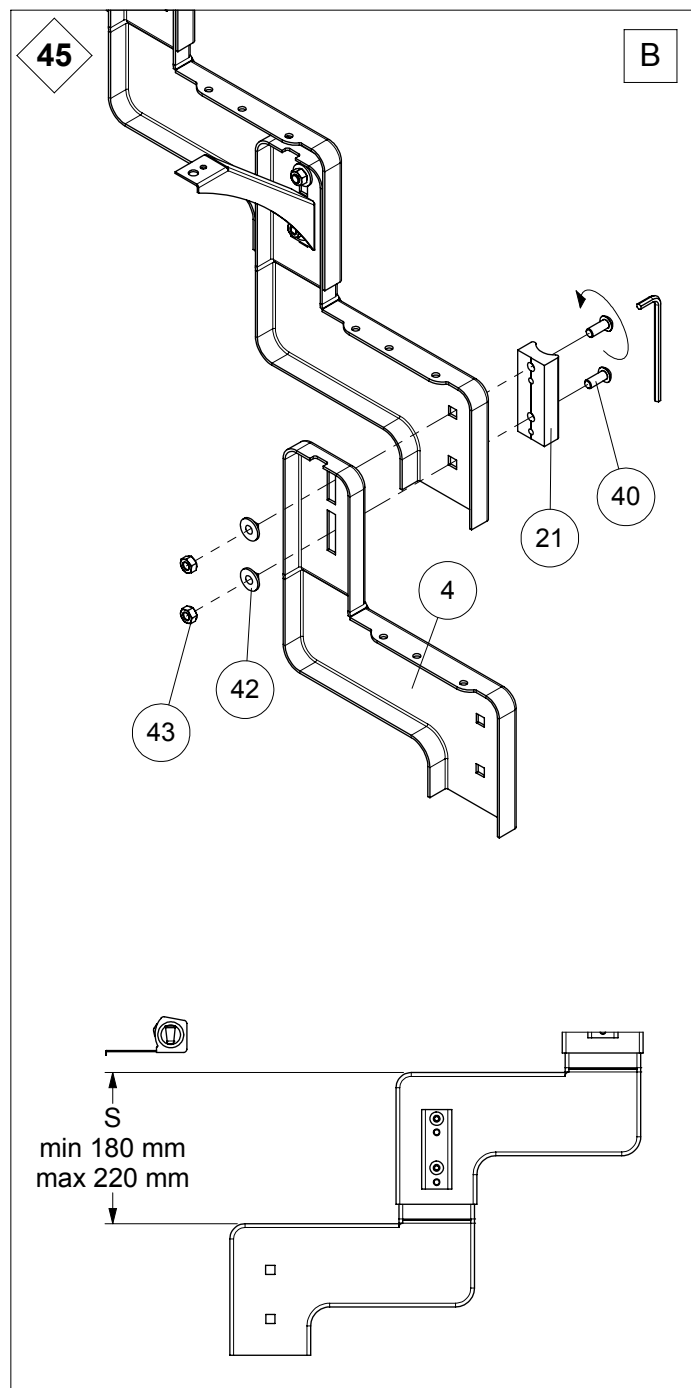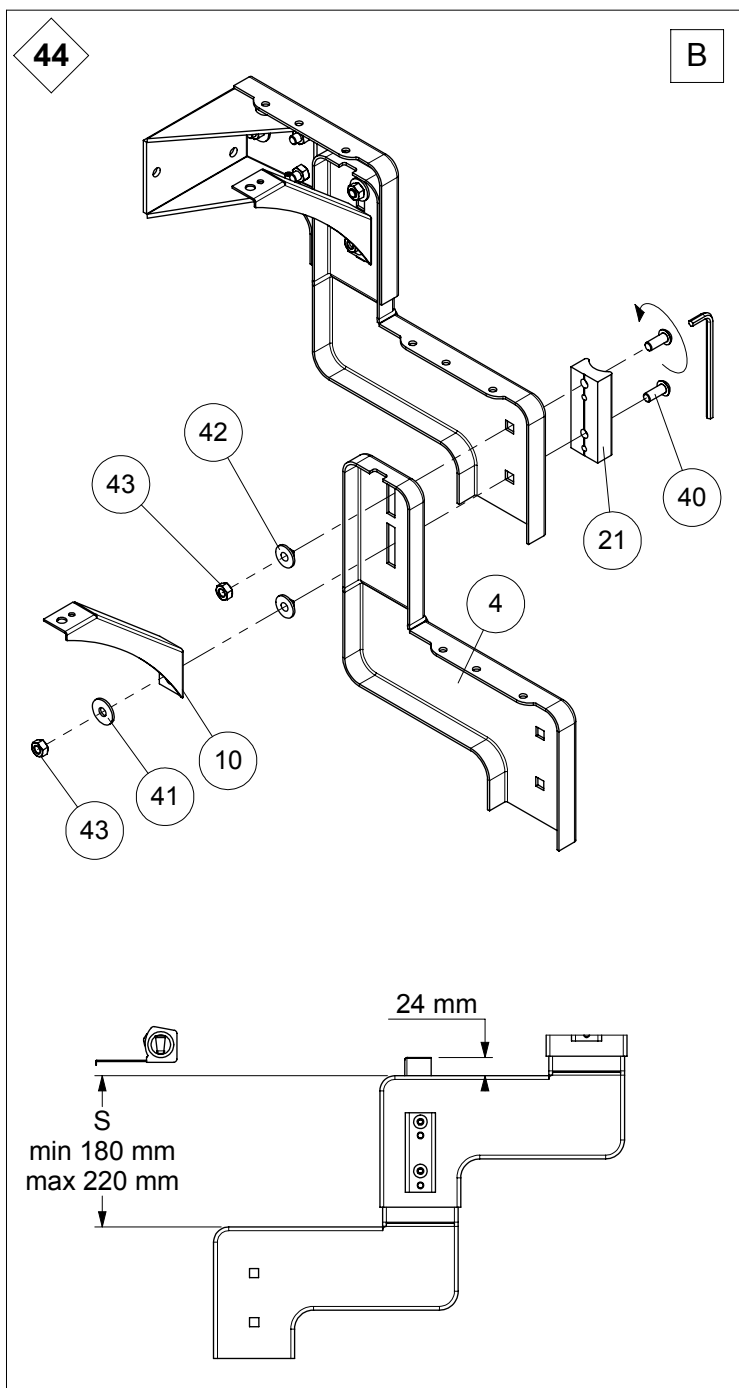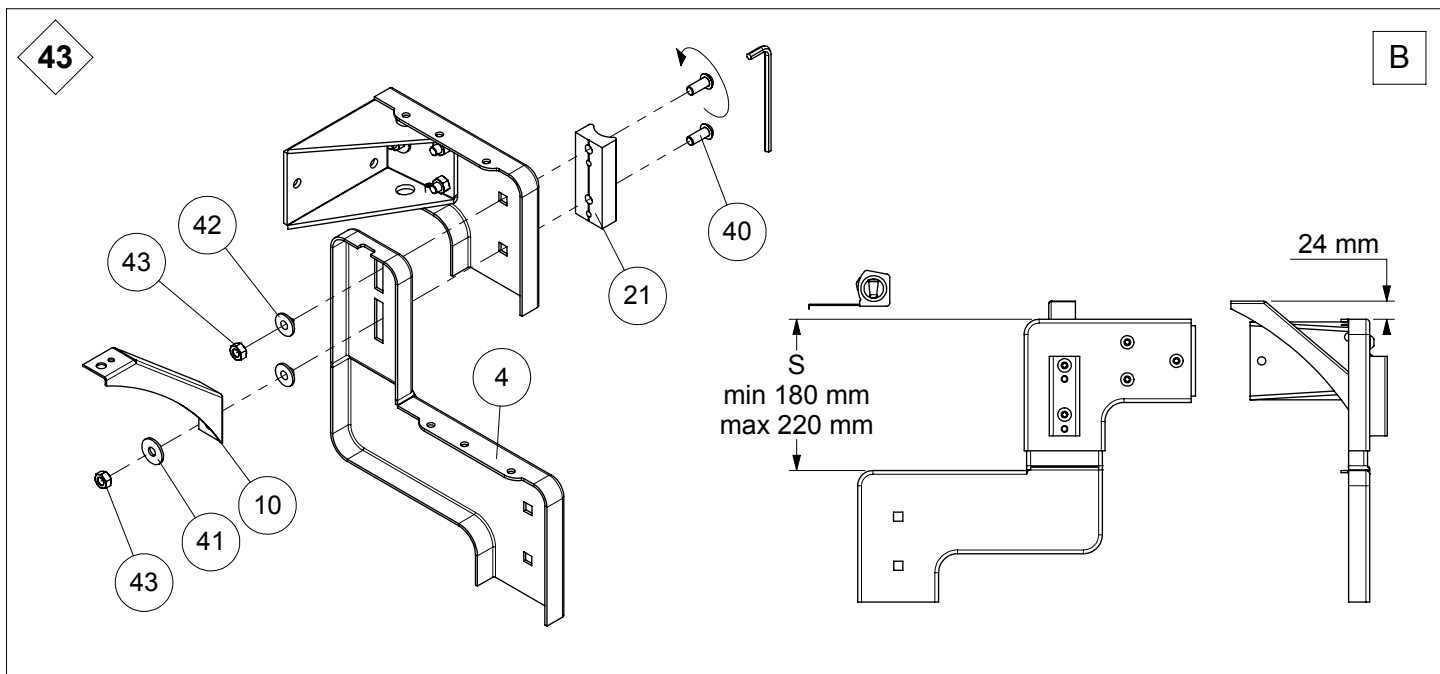


46



B



47




B

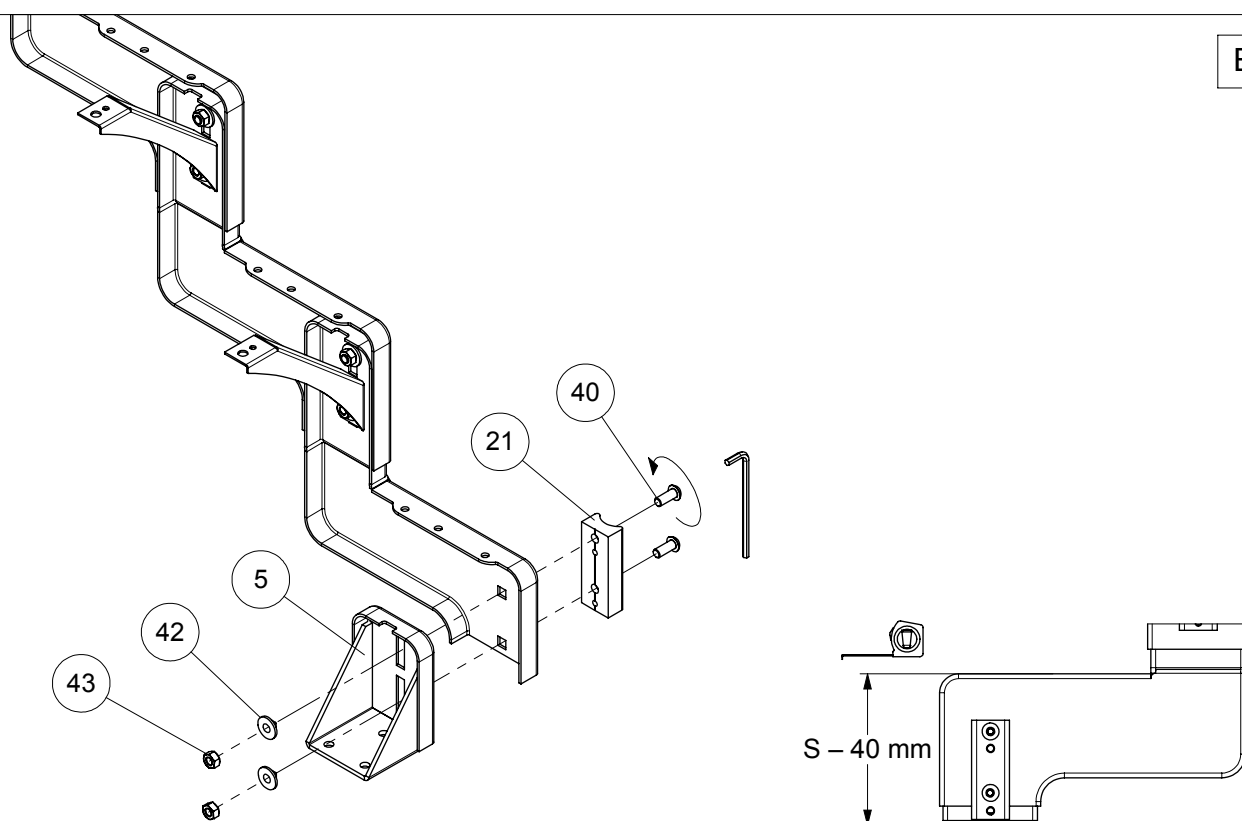

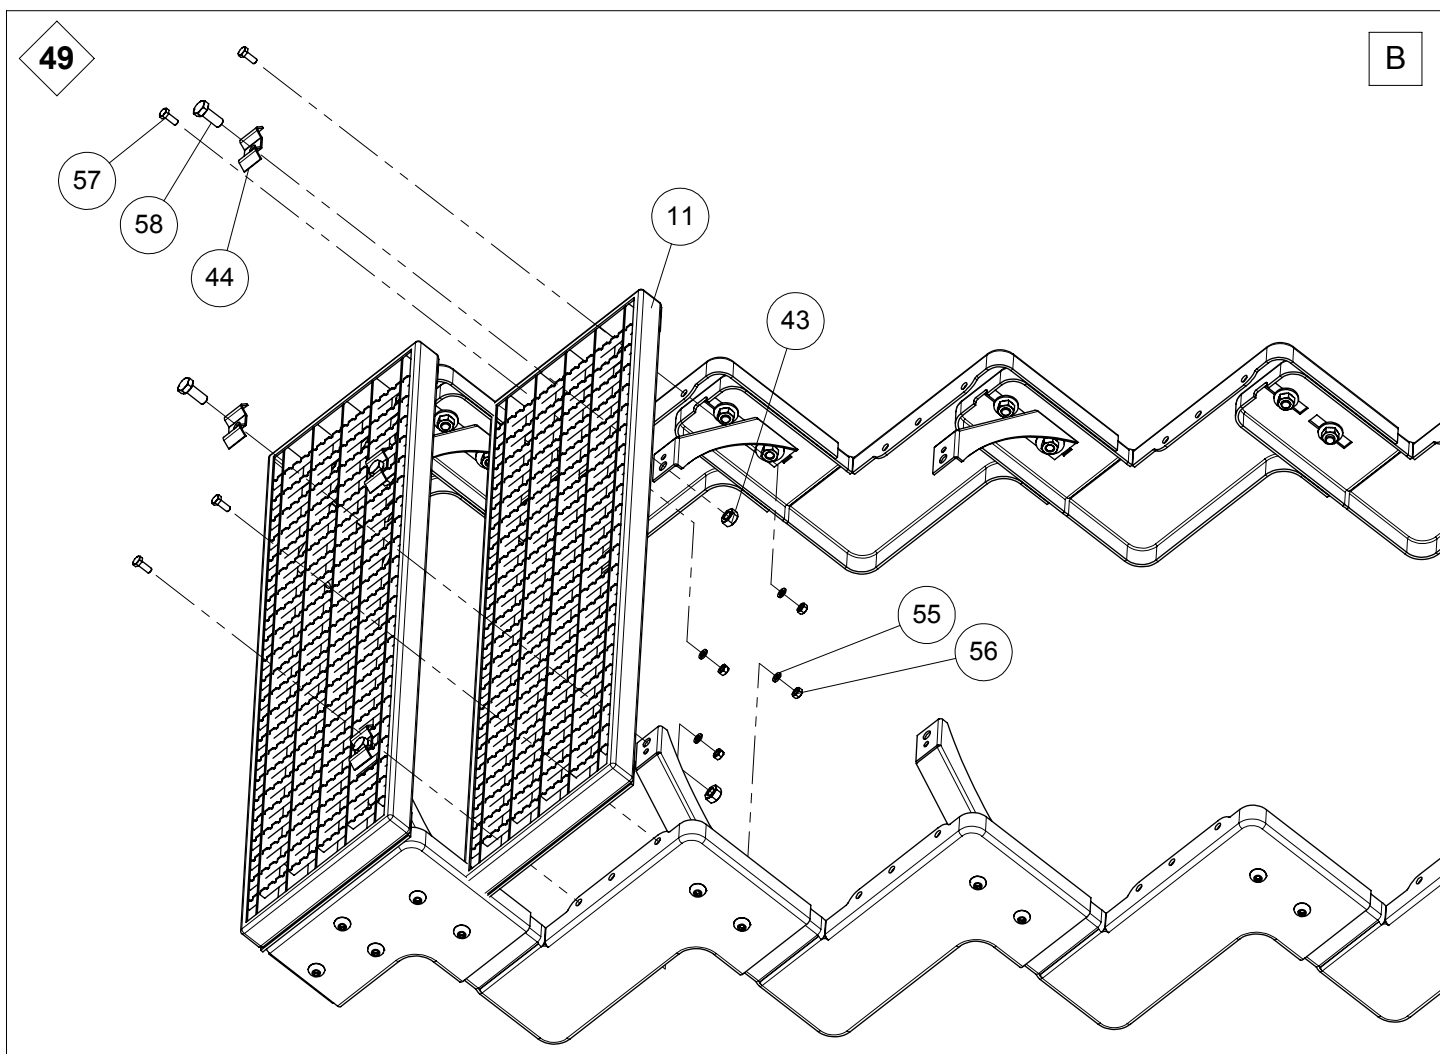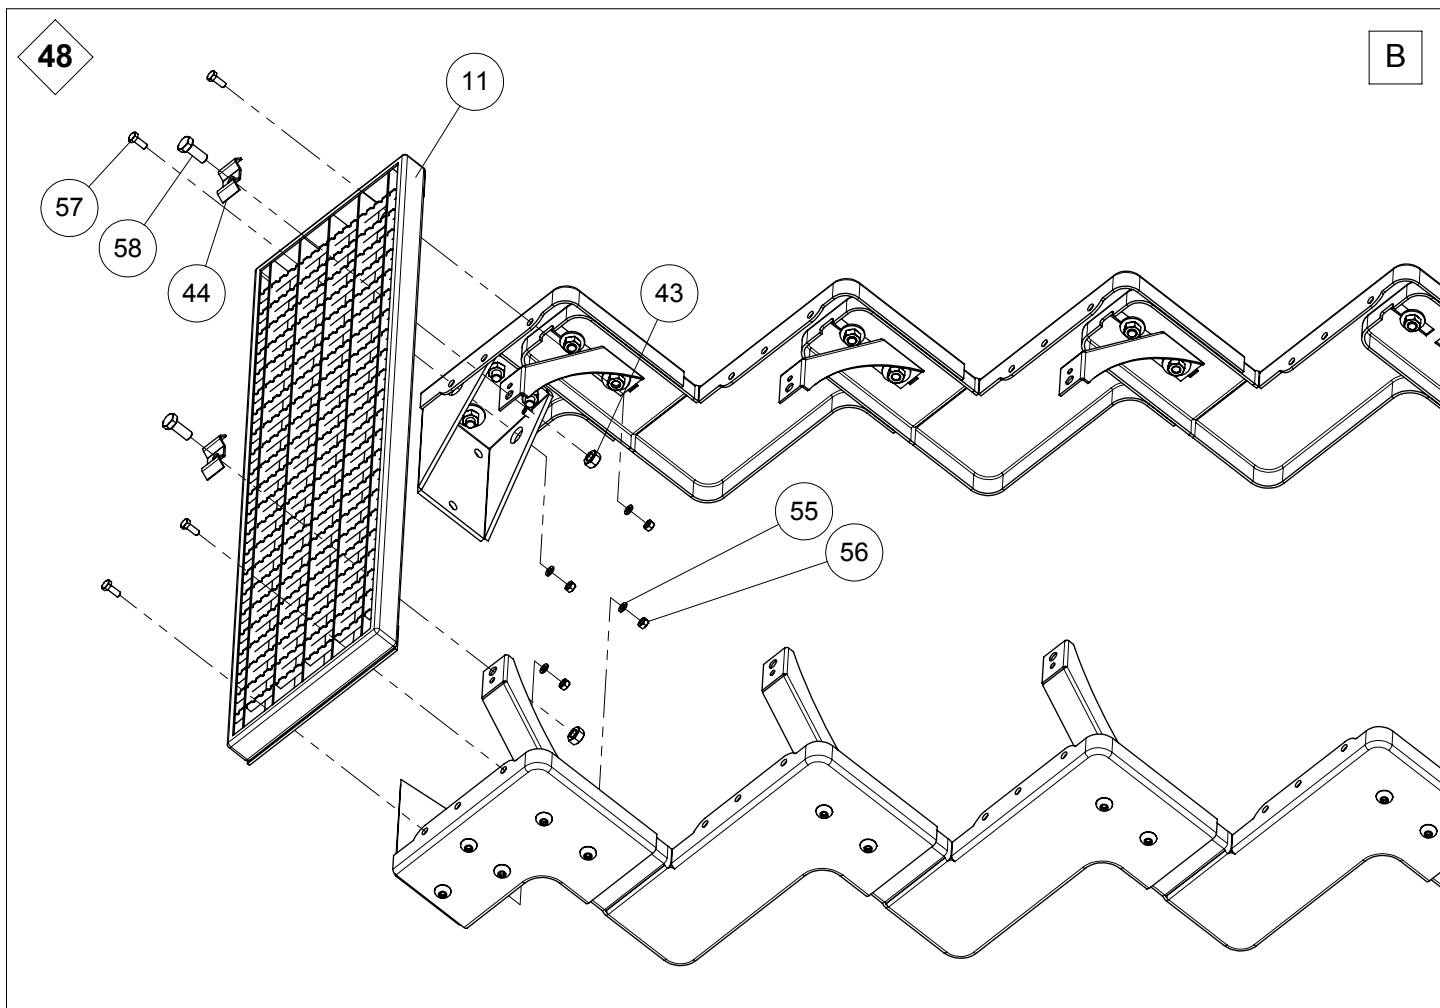

50


B

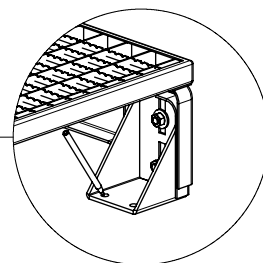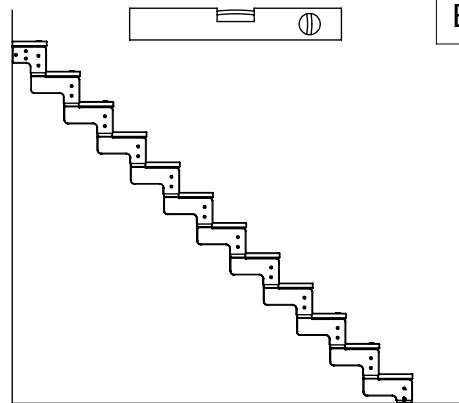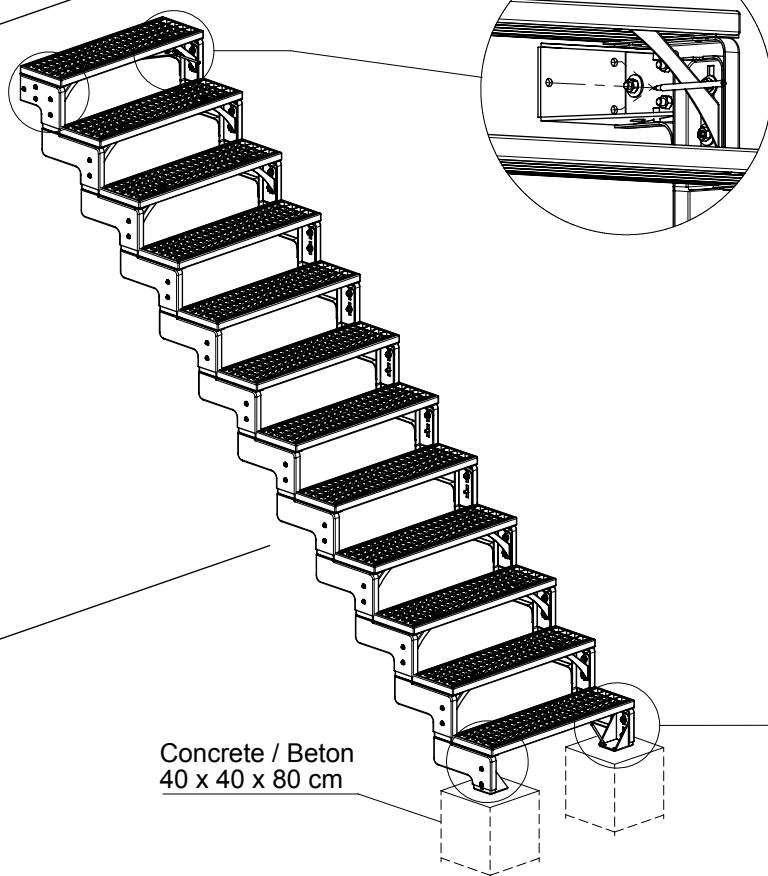

51

52

B

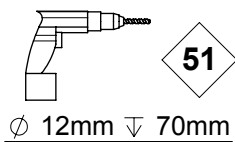


51

44

45

52

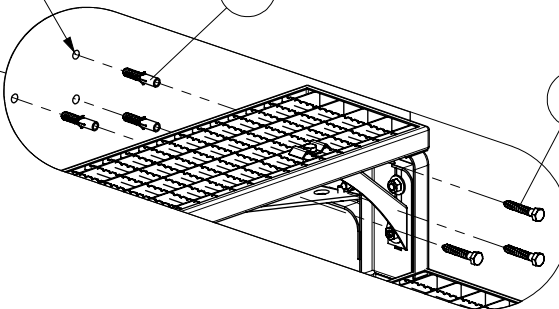


52








45






44

51

Ø 12mm ▽ 70mm

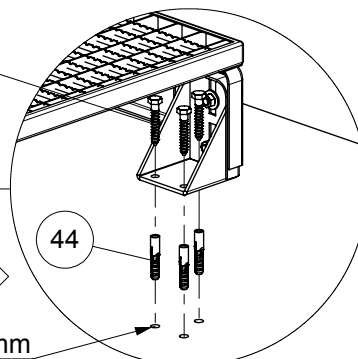

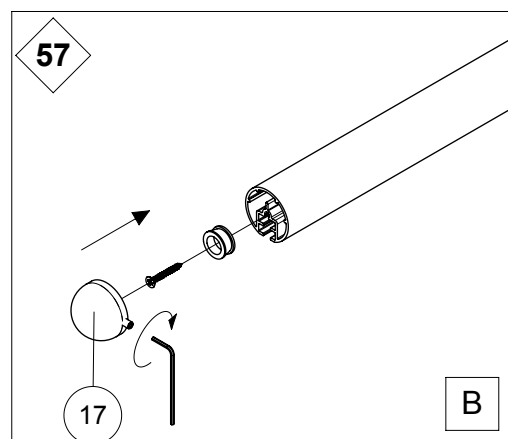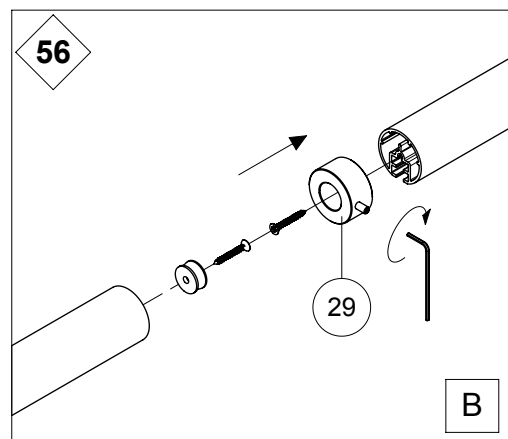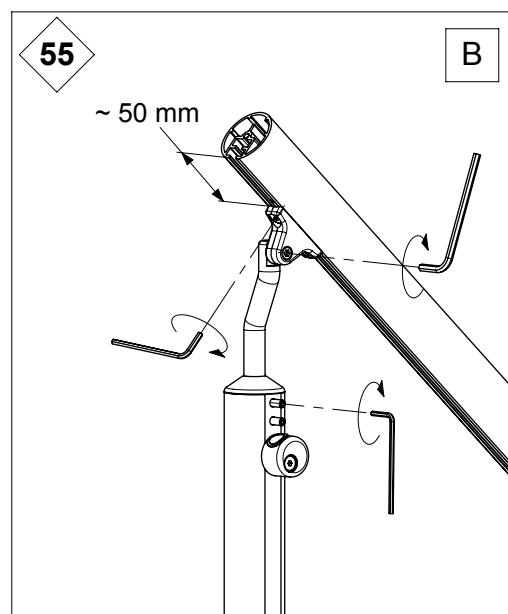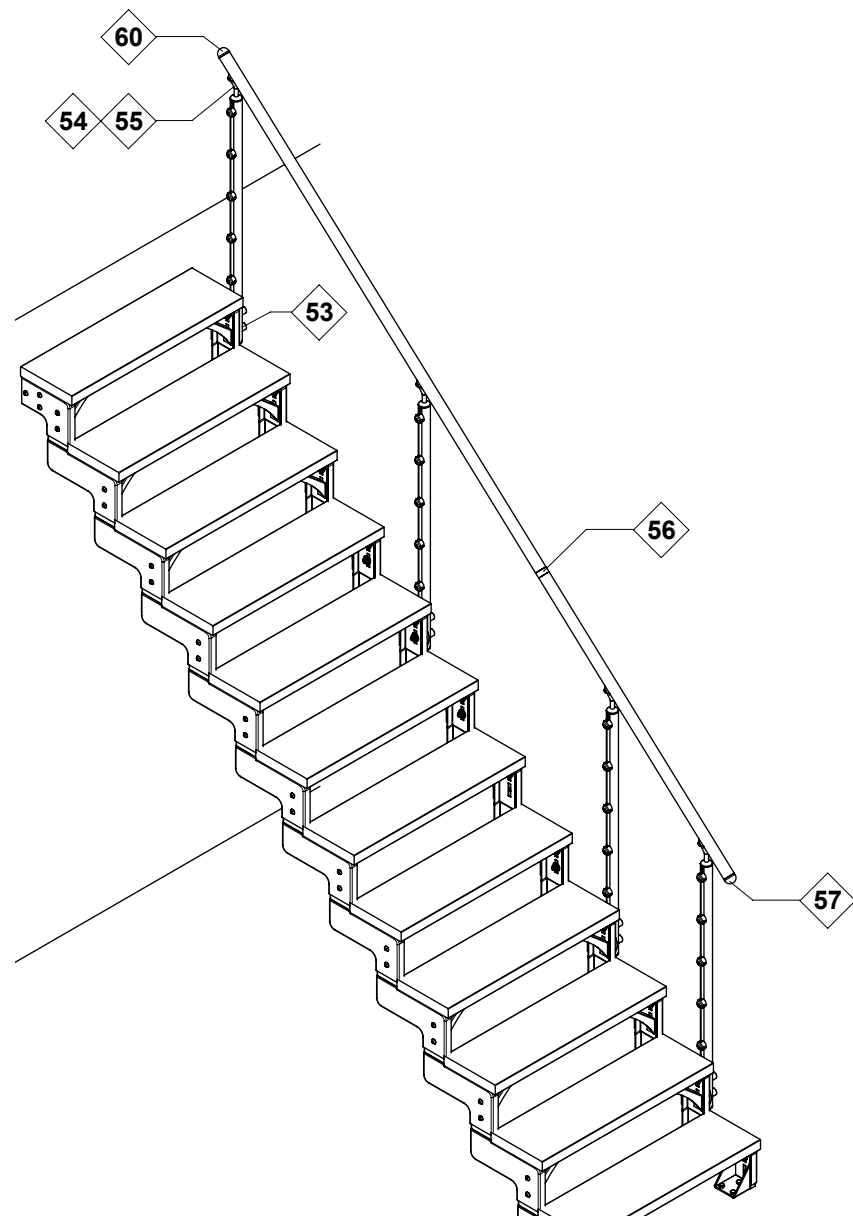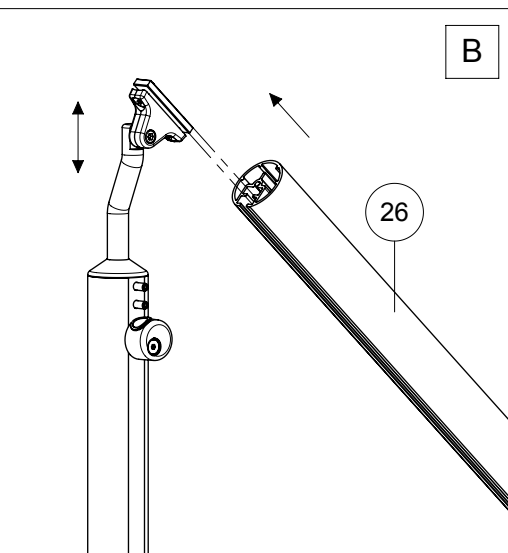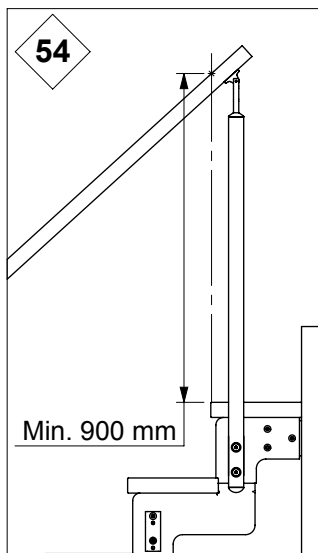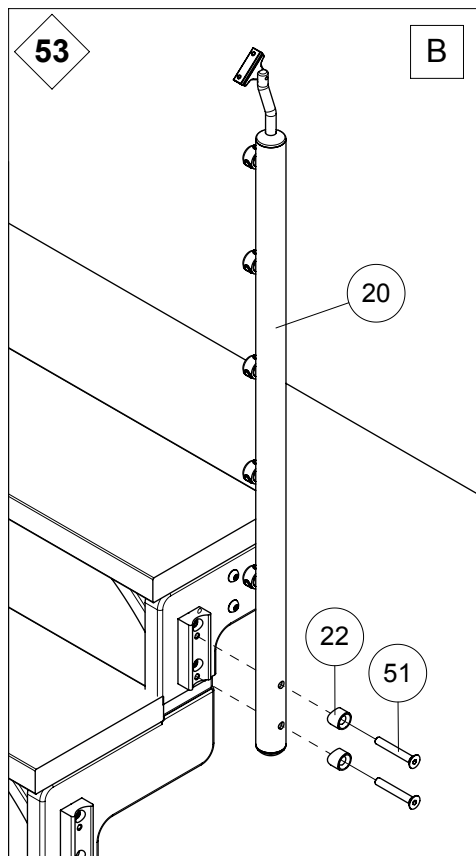


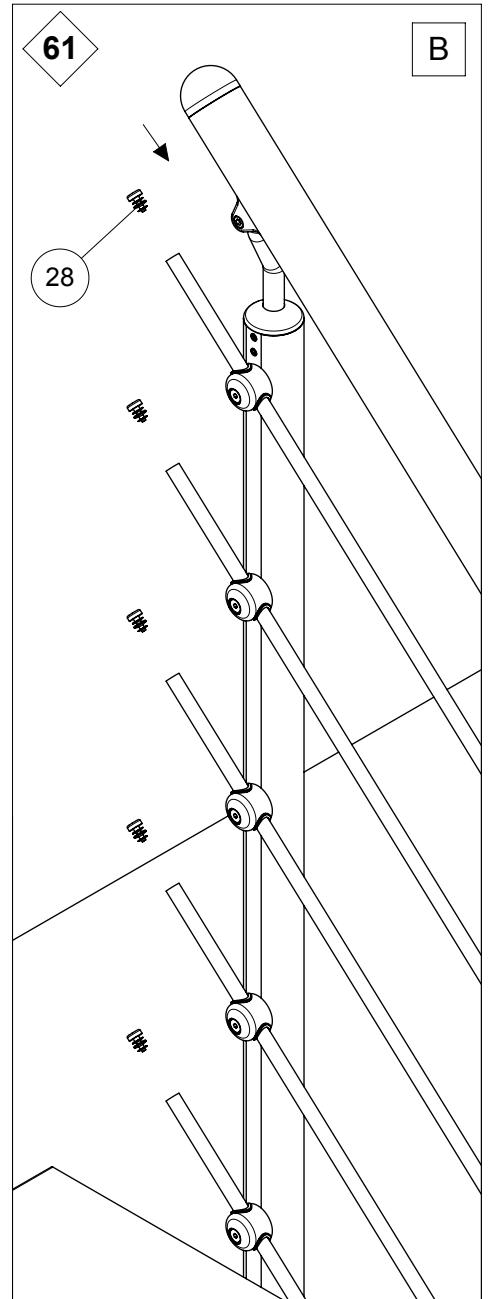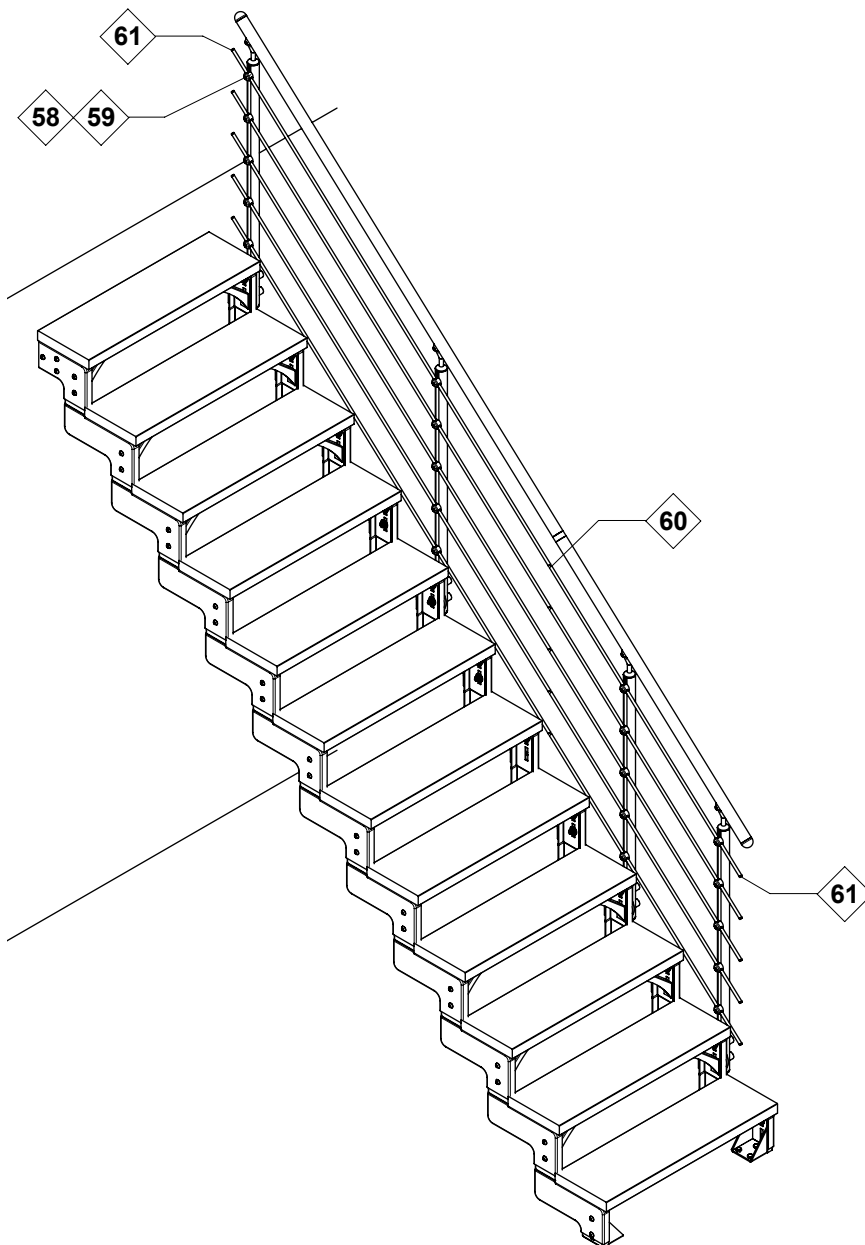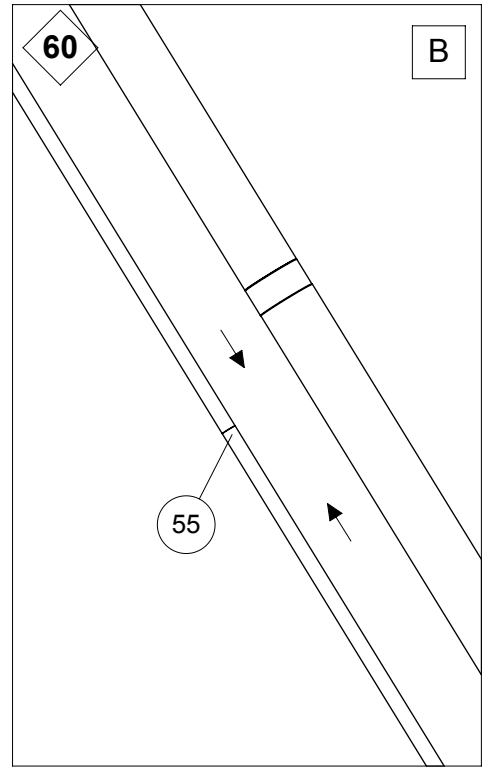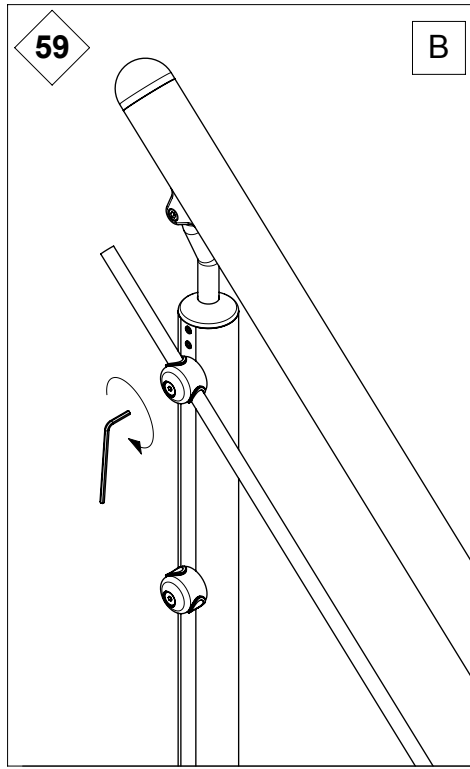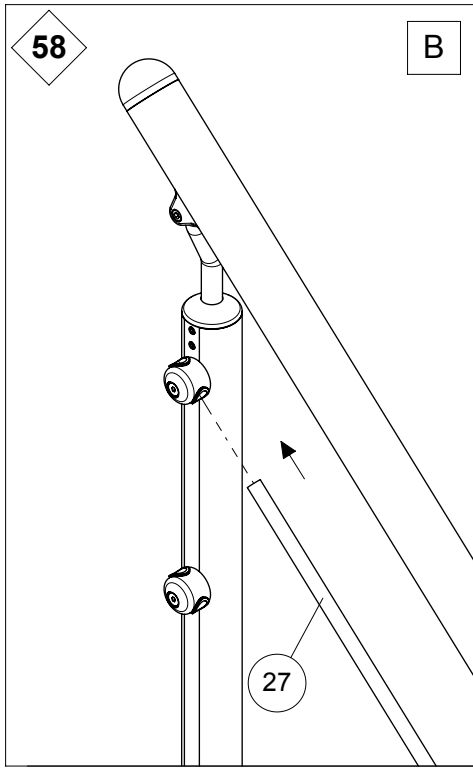



We recommend
using a support
column from 8 treads
and if $W = 100$ cm

Ab 8 Stufen und $W =$
100 cm empfehlen
wir eine Abstützung
der Treppe

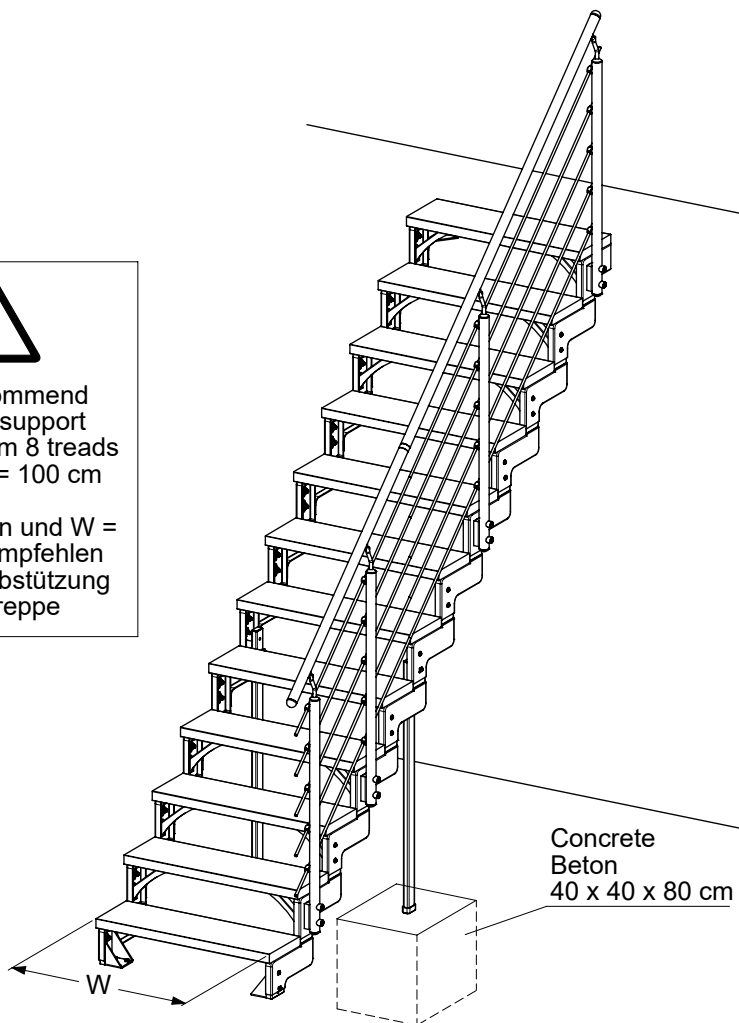

Concrete
Beton
40 x 40 x 80 cm